

SERVICE & OPERATING MANUAL

Original Instructions

MARATHON
A WARREN RUPP, INC. BRAND

Model M1F Metallic Design Level 1

Table of Contents

| | |
|---|----|
| Engineering Data and Temperature Limitations | 1 |
| Explanation of Pump Nomenclature | 2 |
| Performance Curve | 3 |
| Dimensions | 4 |
| Metric Dimensions | 5 |
| Principle of Pump Operation..... | 6 |
| Installation and Start-Up | 6 |
| Air Supply | 6 |
| Air Valve Lubrication..... | 6 |
| Air Line Moisture..... | 6 |
| Air Inlet and Priming | 6 |
| Between Uses | 6 |
| Installation Guide..... | 7 |
| Troubleshooting | 8 |
| Warranty | 8 |
| Recycling..... | 9 |
| Important Safety Information | 9 |
| Material Codes | 10 |
| Composite Repair Parts Drawing | 12 |
| Available Service and Conversion Kits..... | 12 |
| Composite Repair Parts List | 13 |
| Air Valve Drawing, Parts List, Service Instructions (Integral Muffler) | 14 |
| Air Valve Drawing, Parts List, Service Instructions | 15 |
| Air Valve Drawing, Parts List, Service Instructions (Cast Iron Centers Only)..... | 16 |



See pages 2, 30 and 31
for ATEX ratings.



CE

| | |
|--|----|
| Air Valve Drawing, Parts List, Service Instructions (Non-ATEX Only) | 17 |
| Air Valve w/Stroke Indicator Drawing, Parts List, Service Instructions | 18 |
| Solenoid Shifted Air Valve Drawing | 19 |
| Solenoid Shifted Air Valve Parts List | 19 |
| Solenoid Shifted Air Valve Option..... | 20 |
| Diaphragm Service Drawing, with Overlay | 21 |
| Diaphragm Service Drawing, Non-Overlay..... | 21 |
| Diaphragm Servicing | 22 |
| Overlay Diaphragm Servicing | 22 |
| Pilot Valve Servicing, Assembly Drawing & Parts List..... | 23 |
| Actuator Plunger Servicing..... | 24 |
| Check Valve Servicing..... | 25 |
| Check Valve Drawing | 25 |
| Optional Muffler Configurations..... | 26 |
| Optional Muffler Configuration Drawing..... | 26 |
| Pumping Hazardous Liquids..... | 27 |
| Converting Pump for Piping Exhaust Air | 27 |
| Converted Exhaust Illustration..... | 27 |
| Pulse Output Kit Drawing | 28 |
| Pulse Output Kit Options | 28 |
| Grounding The Pump | 29 |
| CE Declaration of Conformity Machinery | 30 |
| CE Declaration of Conformity ATEX | 31 |
| Explanation of ATEX Certifications | 32 |

**WARREN
RUPP®**


Quality System
ISO9001 Certified

Environmental
Management System
ISO14001 Certified

IDEX
FLUID & METERING



See pages 2, 30 and 31
for ATEX ratings.

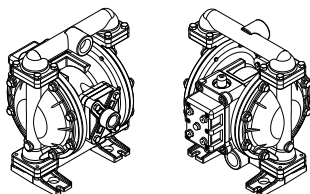

Air Inlet Side View

Air Exhaust Side View



MARATHON®
A WARREN RUPP, INC. BRAND

M1F Metallic Design Level 1 Ball Valve

**Air-Operated
Double Diaphragm Pump**

ENGINEERING, PERFORMANCE
& CONSTRUCTION DATA

| INTAKE/DISCHARGE PIPE SIZE 1" NPT (internal) 1" BSP Tapered (internal) | CAPACITY 0 to 45 gallons per minute (0 to 170 liters per minute) | AIR VALVE No-lube, no-stall design | SOLIDS-HANDLING Up to .25 in. (6mm) | HEADS UP TO 125 psi or 289 ft. of water (8.6 Kg/cm ² or 86 meters) | DISPLACEMENT/STROKE .11 Gallon / .42 liter |
|--|--|--|--|---|---|
| ⚠ CAUTION! Operating temperature limitations are as follows: | | | | | |
| Materials | | | | Operating Temperatures | |
| | | | | Maximum | Minimum |
| Nitrile: General purpose, oil-resistant. Shows good solvent, oil, water and hydraulic fluid resistance. Should not be used with highly polar solvents like acetone and MEK, ozone, chlorinated hydrocarbons and nitro hydrocarbons. | | | | 190° F 88° C | -10° F -23° C |
| EPDM: Shows very good water and chemical resistance. Has poor resistance to oil and solvents, but is fair in ketones and alcohols. | | | | 280° F 138° C | -40° F -40° C |
| Neoprene: All purpose. Resistant to vegetable oil. Generally not affected by moderate chemicals, fats, greases and many oils and solvents. Generally attacked by strong oxidizing acids, ketones, esters, nitro hydrocarbons and chlorinated aromatic hydrocarbons. | | | | 200° F 93° C | -10° F -23° C |
| Santoprene®: Injection molded thermoplastic elastomer with no fabric layer. Long mechanical flex life. Excellent abrasion resistance. | | | | 275° F 135° C | -40° F -40° C |
| Virgin PTFE: Chemically inert, virtually impervious. Very few chemicals are known to react chemically with PTFE- molten alkali metals, turbulent liquid or gaseous fluorine and a few fluoro-chemicals such as chlorine trifluoride or oxygen difluoride which readily liberate free fluorine at elevated temperatures. | | | | 220° F 104° C | -35° F -37° C |
| FKM (Fluorocarbon): Shows good resistance to a wide range of oils and solvents; especially all aliphatic, aromatic and halogenated hydrocarbons, acids, animal and vegetable oils. Hot water or hot aqueous solutions (over 70°F) will attack FKM. | | | | 350° F 177° C | -40° F -40° C |
| Polypropylene: | | | | 180° F 82° C | 32° F 0° C |
| Conductive HDPE: | | | | 180° F 82° C | -35° F -37° C |

For specific applications, always consult the MARATHON Chemical Resistance Chart

MARATHON® pumps are designed to be powered only by compressed air.

Explanation of Pump Nomenclature, M1F Metallic - Design Level 1- Ball Valve

| MODEL | Pump Brand | Pump Size | Check Valve Type | Design Level | Wetted Material | Diaphragm/ Check Valve Materials | Check Valve Seat | Non-Wetted Material Options | Porting Options | Pump Style | Pump Options | Kit Options | Shipping Weight lbs. (kg) |
|-----------------|------------|-----------|------------------|--------------|-----------------|----------------------------------|------------------|-----------------------------|-----------------|------------|--------------|-------------|---------------------------|
| M1FB1ABWANS000. | M | 1F | B | 1 | A | B | W | A | N | S | 0 | 00. | 28 (13) |
| M1FB1AIWANS000. | M | 1F | B | 1 | A | I | W | A | N | S | 0 | 00. | 28 (13) |
| M1FB1AGTANS000. | M | 1F | B | 1 | A | G | T | A | N | S | 0 | 00. | 28 (13) |
| M1FB1A1WANS000. | M | 1F | B | 1 | A | 1 | W | A | N | S | 0 | 00. | 28 (13) |
| M1FB1ACTANS000. | M | 1F | B | 1 | A | C | T | A | N | S | 0 | 00. | 28 (13) |
| M1FB1IBWANS000. | M | 1F | B | 1 | I | B | W | A | N | S | 0 | 00. | 46 (21) |
| M1FB1INWANS000. | M | 1F | B | 1 | I | N | W | A | N | S | 0 | 00. | 46 (21) |
| M1FB1I1WANS000. | M | 1F | B | 1 | I | 1 | W | A | N | S | 0 | 00. | 46 (21) |
| M1FB1ICTANS000. | M | 1F | B | 1 | I | C | T | A | N | S | 0 | 00. | 46 (21) |
| M1FB1IIWANS000. | M | 1F | B | 1 | I | I | W | A | N | S | 0 | 00. | 46 (21) |
| M1FB1SGTANS000. | M | 1F | B | 1 | S | G | T | A | N | S | 0 | 00. | 43 (20) |

Note: Models listed in the table are for reference only. See nomenclature below for other models.

Pump Brand
M= MARATHON®

Pump Size
1F=1"

Check Valve Type
B= Ball

Design Level
1= Design Level

Wetted Material
A= Aluminum
I= Cast Iron
S= Stainless Steel
H= Alloy C

Diaphragm Check Valve Materials

1= Santoprene/Santoprene
B= Nitrile/Nitrile
C= FKM/PTFE
I= EPDM/Santoprene
G= PTFE-Neoprene/PTFE
N= Neoprene/Neoprene
Z= One-Piece Bonded/PTFE

Check Valve Seat
A= Aluminum
C= Carbon Steel
S= Stainless Steel
T= PTFE
W= UHMW

Non-Wetted Material Options

A= Painted Aluminum
I= Cast Iron
Y= Painted Aluminum with Stainless Steel Hardware
Z= Cast Iron with Stainless Steel Hardware

Porting Options
N= NPT Threads
B= BSP (Tapered) Threads
R= Raised Face 150# Threaded ANSI Flange

Pump Style
S= Standard

Pump Options


0= None
1= Sound Dampening Muffler
2= Mesh Muffler
3= High temperature Air Valve w/Encapsulated Muffler
4= High temperature Air Valve w/Sound Dampening Muffler
5= High temperature Air Valve w/Mesh Muffler
⚠6= Metal Muffler
⚠7= Metal Muffler with Grounding Cable

Kit Options

⚠00.= None
⚠P0.= 10-30VDC Pulse Output Kit
⚠P1.= Intrinsically-Safe 5-30VDC, 110/120VAC 220/240 VAC Pulse Output Kit
P2.= 110/120 or 220/240VAC Pulse Output Kit
E0.= Solenoid Kit with 24VDC Coil
⚠E1.= Solenoid Kit with 24VDC Explosion-Proof Coil
⚠E2.= Solenoid Kit with 24VAC/12VDC Coil Explosion-Proof Coil
⚠E3.= Solenoid Kit with 12VDC Explosion-Proof Coil
⚠E4.= Solenoid Kit with 110VAC Coil
⚠E5.= Solenoid Kit with 110VAC Explosion-Proof Coil
E6.= Solenoid Kit with 220VAC Coil

Kit Options continued


⚠E7.= Solenoid Kit with 220VAC Explosion-Proof Coil
⚠E8.= Solenoid Kit with 110VAC, 50 Hz Explosion-Proof Coil
⚠E9.= Solenoid Kit with 230VAC, 50 Hz Explosion-Proof Coil
SP.= Stroke Indicator Pins
◆A1.= Solenoid Kit with 12 VDC ATEX Compliant Coil
◆A2.= Solenoid Kit with 24 VDC ATEX Compliant Coil
◆A3.= Solenoid Kit with 110/120 VAC 50/60 Hz ATEX Compliant Coil
◆A4.= Solenoid Kit with 220/240 VAC 50/60 Hz ATEX Compliant Coil

(1)  II 1G c T5
II 3/1 G c T5
II 1D c T100°C
⚠ I M1 c
I M2 c

Models equipped with Wetted Options I, S or H, Non-Wetted Options I or Z Pump Options 6 or 7, and Kit Option 0.
Note: See page 31 for ATEX Explanation of EC-Type Certificate



II 2G c T5
II 3/2 G c T5
II 2D c T100°C

Models equipped with Wetted Options A, I, S, or H, Non-Wetted Options A, I, Y, or Z, Pump Options 6 or 7, and Kit Option 0.
Note: See page 31 for ATEX Explanation of Type Examination Certificate

(2)  II 2G Ex ia c IIC T5
II 3/2 G Ex ia c IIC T5
II 2D Ex c ia 20 IP67 T100°C
◆ Note: Pumps ordered with the options listed in (1) to the left are ATEX compliant when ordered with kit option P1.


(3*)  II 2G EEx m c II T5
II 3/2 2G EEx m c II T5
II 2D c IP65 T100°C
◆ Note: Pumps ordered with the options listed in (1) to the left are ATEX compliant when ordered with kit option A1, A2, A3, or A4. Compressed Air Temperature Range: Maximum Ambient Temperature to plus 50°C.

*Note: See page 18 for Special Conditions For Safe Use.

(4)  IEC EEx m T4 
⚠ Note: Pump models equipped with these explosion-proof solenoid kit options E1, E3, E5, E7, E8 or E9, are certified and approved by the above agencies. They are NOT ATEX compliant.



Performance Curve, M1F Metallic Design Level 1

Performance based on the following: elastomer fitted pump, flooded suction, water at ambient conditions.
The use of other materials and varying hydraulic conditions may result in deviations in excess of 5%.

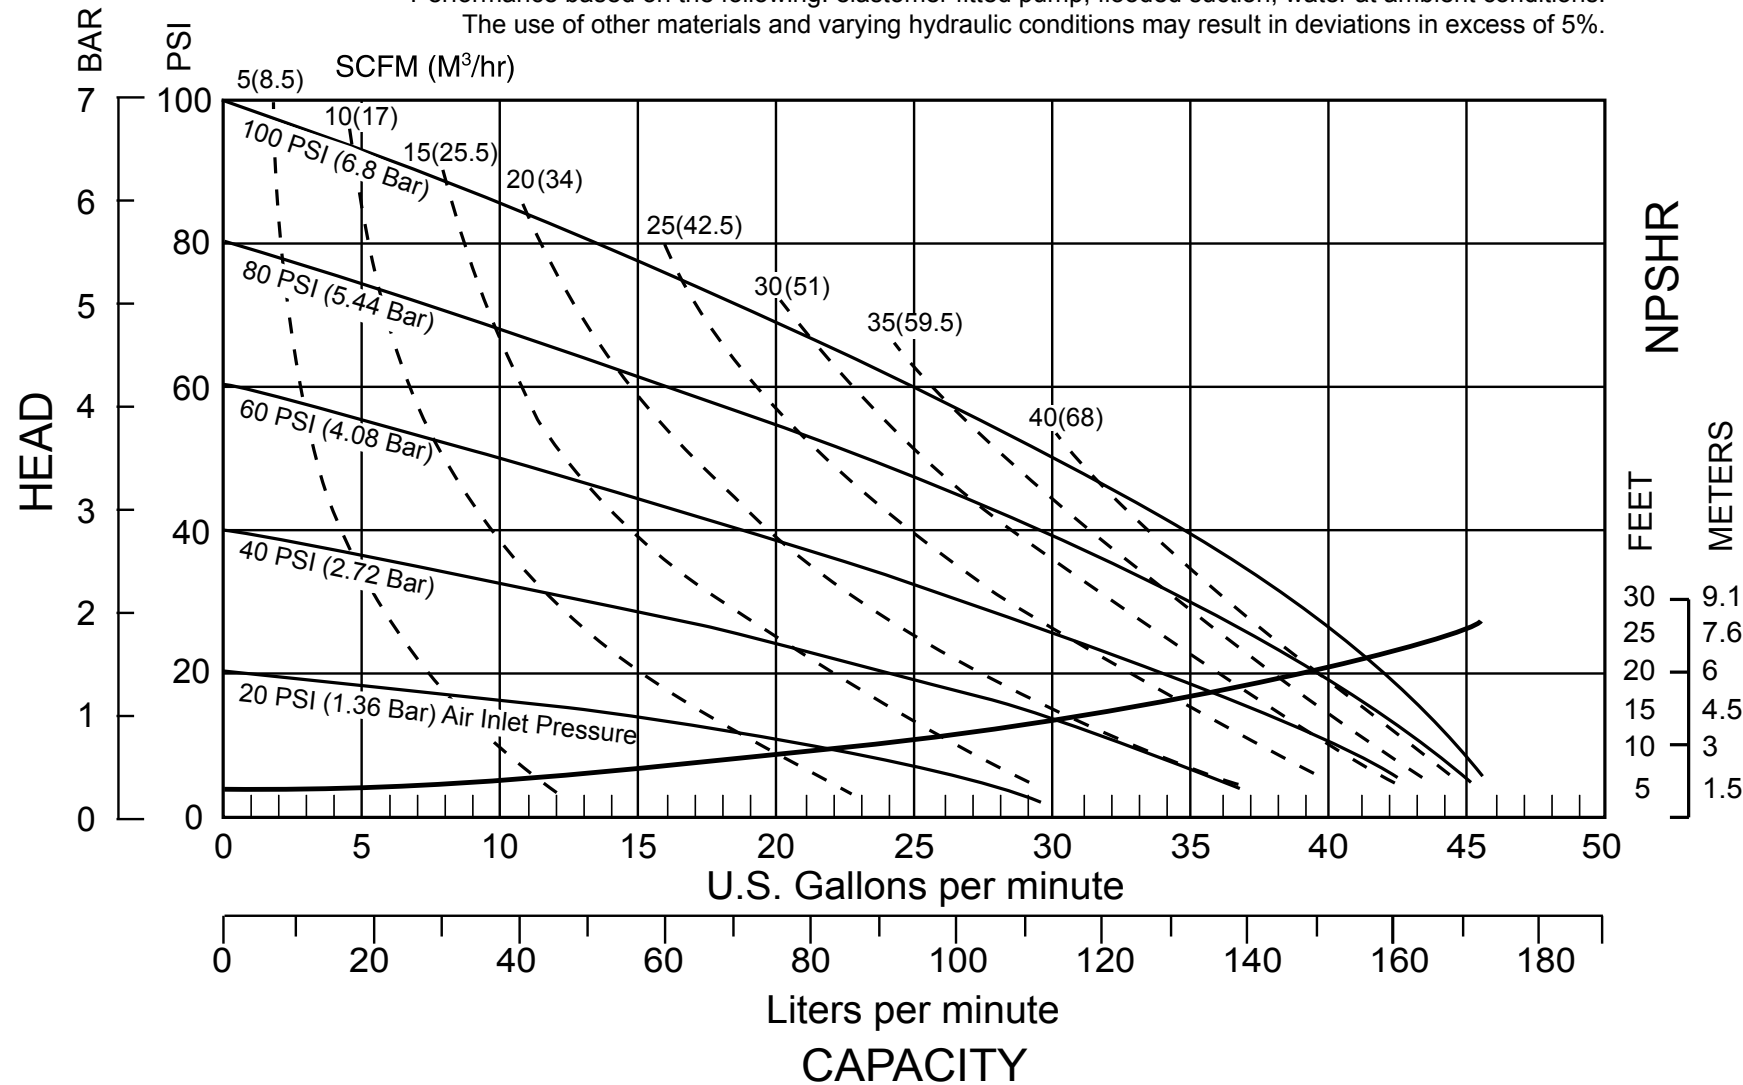


Dimensions: M1F Metallic

Dimensions in Inches
Dimensional Tolerance: $\pm 1/8"$

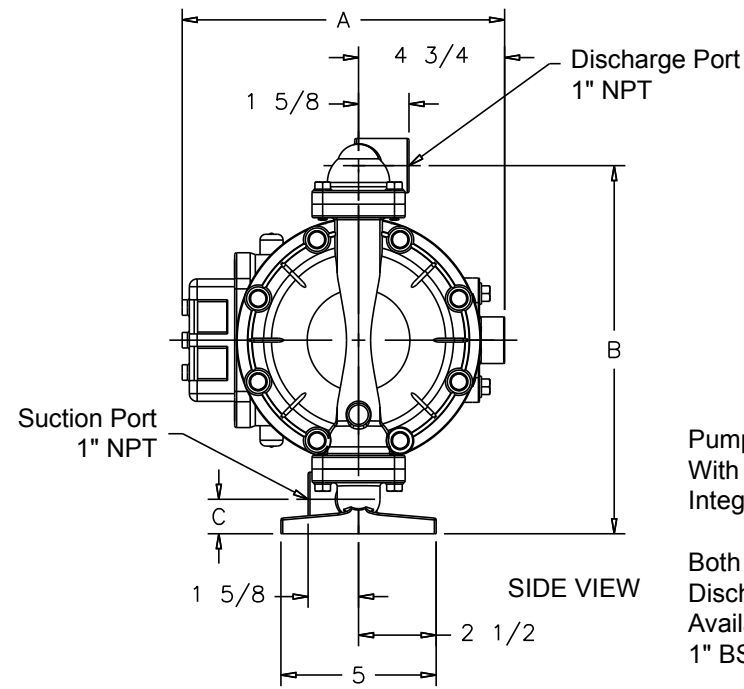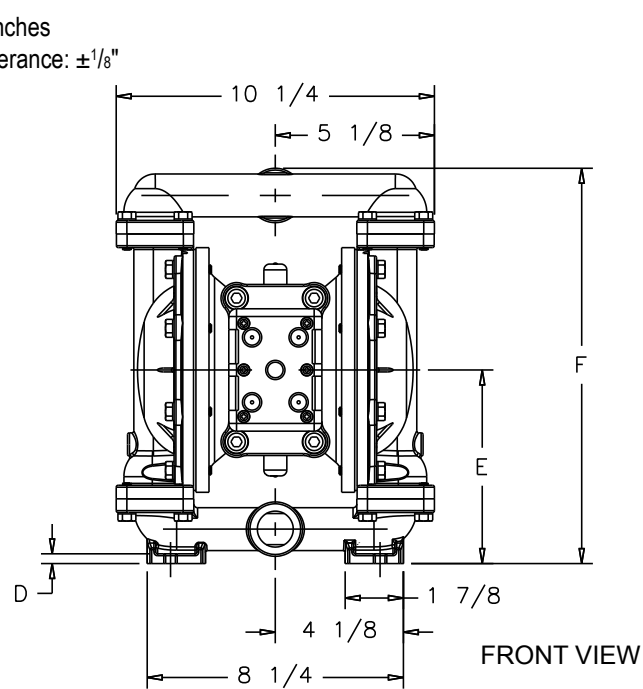

Pump Shown
With 530-028-550
Integral Muffler


Both Suction And
Discharge Ports Are
Available With
1" BSP Tapered Connection

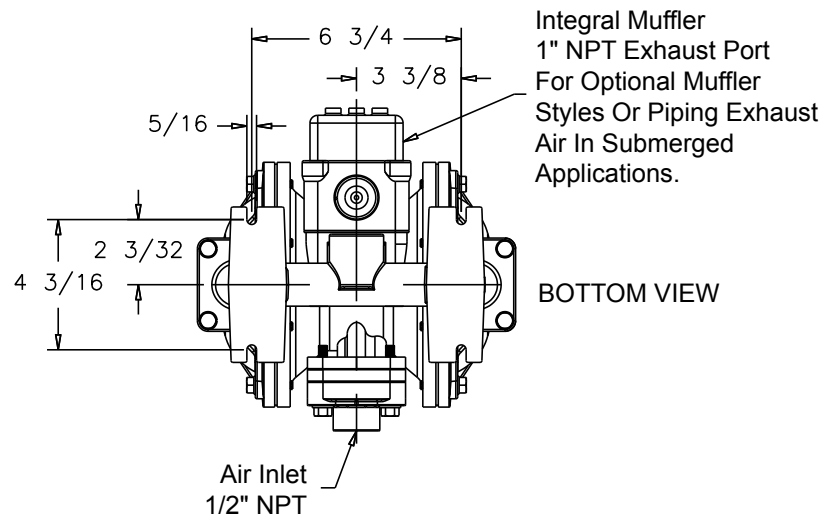

| Dimension | A | B | C | D | E | F |
|-------------------------|--------|----------|--------|------|---------|----------|
| Encapsulated Muffler | 10 3/8 | | | | | |
| Pulse Output Kit | 10 3/8 | | | | | |
| Aluminum & Cast Iron | | 11 27/32 | 1 3/32 | 5/16 | 6 7/32 | 12 23/32 |
| Stainless Steel | | 11 31/32 | 1 7/32 | 7/16 | 6 11/32 | 12 27/32 |
| Mesh Muffler | 13 | | | | | |
| Sound Dampening Muffler | 13 | | | | | |
| Metal Muffler | 12 1/2 | | | | | |

Metric Dimensions: M1F Metallic

Dimensions in Millimeters
Dimensional Tolerance: ± 3mm

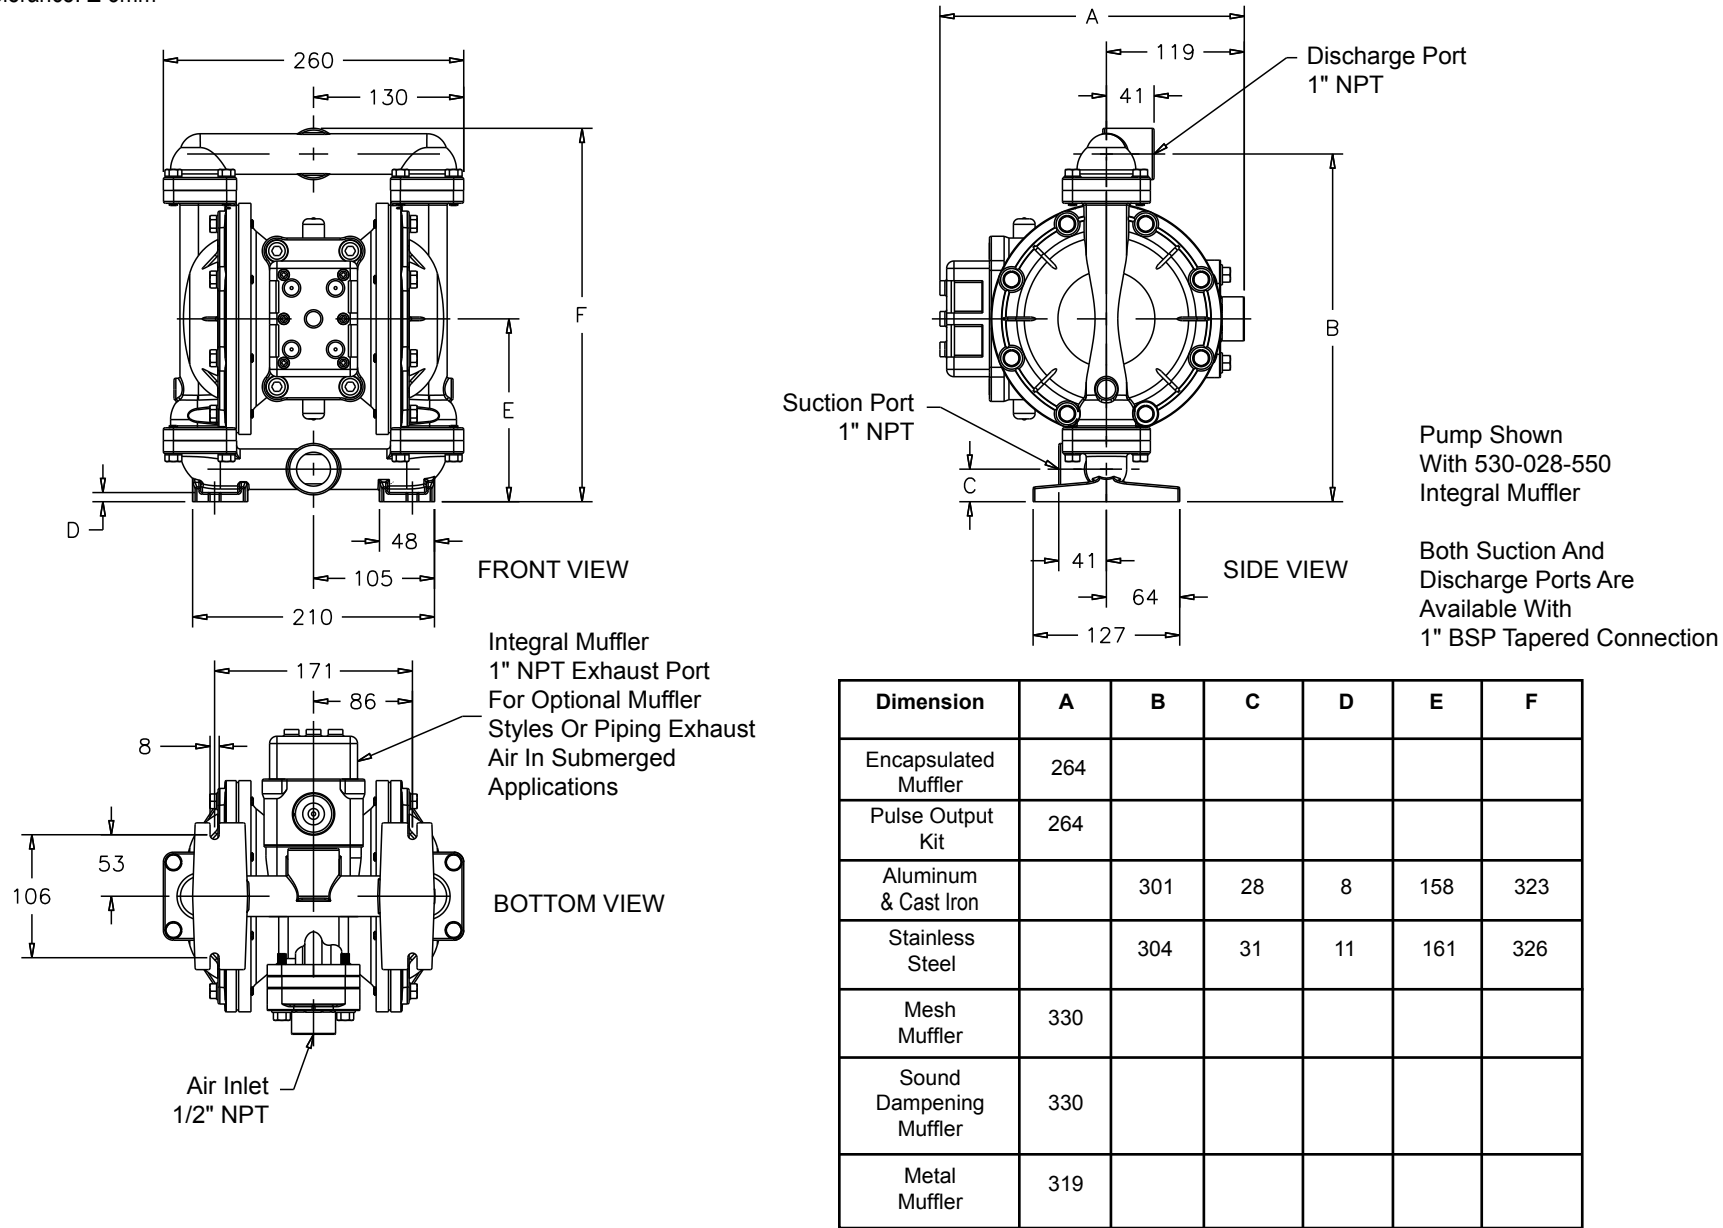

PRINCIPLE OF PUMP OPERATION

This ball type check valve pump is powered by compressed air and is a 1:1 ratio design. The inner side of one diaphragm chamber is alternately pressurized while simultaneously exhausting the other inner chamber. This causes the diaphragms, which are connected by a common rod secured by plates to the centers of the diaphragms, to move in a reciprocating action. (As one diaphragm performs the discharge stroke the other diaphragm is pulled to perform the suction stroke in the opposite chamber.) Air pressure is applied over the entire inner surface of the diaphragm while liquid is discharged from the opposite side of the diaphragm. The diaphragm operates in a balanced condition during the discharge stroke which allows the pump to be operated at discharge heads over 200 feet (61 meters) of water.

For maximum diaphragm life, keep the pump as close to the liquid being pumped as possible. Positive suction head in excess of 10 feet of liquid (3.048 meters) may require a back pressure regulating device to maximize diaphragm life.

Alternate pressurizing and exhausting of the diaphragm chamber is performed by an externally mounted, pilot operated, four way spool type air distribution valve. When the spool shifts to one end of the valve body, inlet pressure is applied to one diaphragm chamber and the other diaphragm chamber exhausts. When the spool shifts to the opposite end of the valve body, the pressure to the chambers

is reversed. The air distribution valve spool is moved by a internal pilot valve which alternately pressurizes one end of the air distribution valve spool while exhausting the other end. The pilot valve is shifted at each end of the diaphragm stroke when an actuator plunger is contacted by the diaphragm plate. This actuator plunger then pushes the end of the pilot valve spool into position to activate the air distribution valve.

The chambers are connected with manifolds with a suction and discharge check valve for each chamber, maintaining flow in one direction through the pump.

INSTALLATION AND START-UP

Locate the pump as close to the product being pumped as possible. Keep the suction line length and number of fittings to a minimum. Do not reduce the suction line diameter.

For installations of rigid piping, short sections of flexible hose should be installed between the pump and the piping. The flexible hose reduces vibration and strain to the pumping system. A MARATHON surge suppressor is recommended to further reduce pulsation in flow.

AIR SUPPLY

Air supply pressure cannot exceed 125 psi (8.6 bar). Connect the pump air inlet to an air supply of sufficient capacity and pressure required for desired performance. When the air supply line is solid piping, use a short length of flexible hose not less than ½" (13mm) in diameter between the pump and the piping to reduce strain to the

piping. The weight of the air supply line, regulators and filters must be supported by some means other than the air inlet cap. Failure to provide support for the piping may result in damage to the pump. A pressure regulating valve should be installed to insure air supply pressure does not exceed recommended limits.

AIR VALVE LUBRICATION

The air distribution valve and the pilot valve are designed to operate WITHOUT lubrication. This is the preferred mode of operation. There may be instances of personal preference or poor quality air supplies when lubrication of the compressed air supply is required. The pump air system will operate with properly lubricated compressed air supply. Proper lubrication requires the use of an air line lubricator (available from MARATHON) set to deliver one drop of SAE 10 non-detergent oil for every 20 SCFM (9.4 liters/sec.) of air the pump consumes at the point of operation. Consult the pump's published Performance Curve to determine this.

AIR LINE MOISTURE

Water in the compressed air supply can create problems such as icing or freezing of the exhaust air, causing the pump to cycle erratically or stop operating. Water in the air supply can be reduced by using a point-of-use air dryer to supplement the user's air drying equipment. This device removes water from the compressed air supply and alleviates the icing or freezing problems.

AIR INLET AND PRIMING

To start the pump, open the air valve approximately ½ to ¾ turn. After the pump primes, the air valve can be opened to increase air flow as desired. If opening the valve increases cycling rate, but does not increase the rate of flow, cavitation has occurred. The valve should be closed slightly to obtain the most efficient air flow to pump flow ratio.

BETWEEN USES

When the pump is used for materials that tend to settle out or solidify when not in motion, the pump should be flushed after each use to prevent damage. (Product remaining in the pump between uses could dry out or settle out. This could cause problems with the diaphragms and check valves at restart.) In freezing temperatures the pump must be completely drained between uses in all cases.

TYPICAL INSTALLATION GUIDE


For Metallic Pumps

Available from
MARATHON

- ① MTA1 or MTA25 Surge Suppressor
- ② 020-050-000 Filter/Regulator
- ③ 020-050-001 Lubricator



CAUTION
The air exhaust should be piped to an area for safe disposition of the product being pumped, in the event of a diaphragm failure.

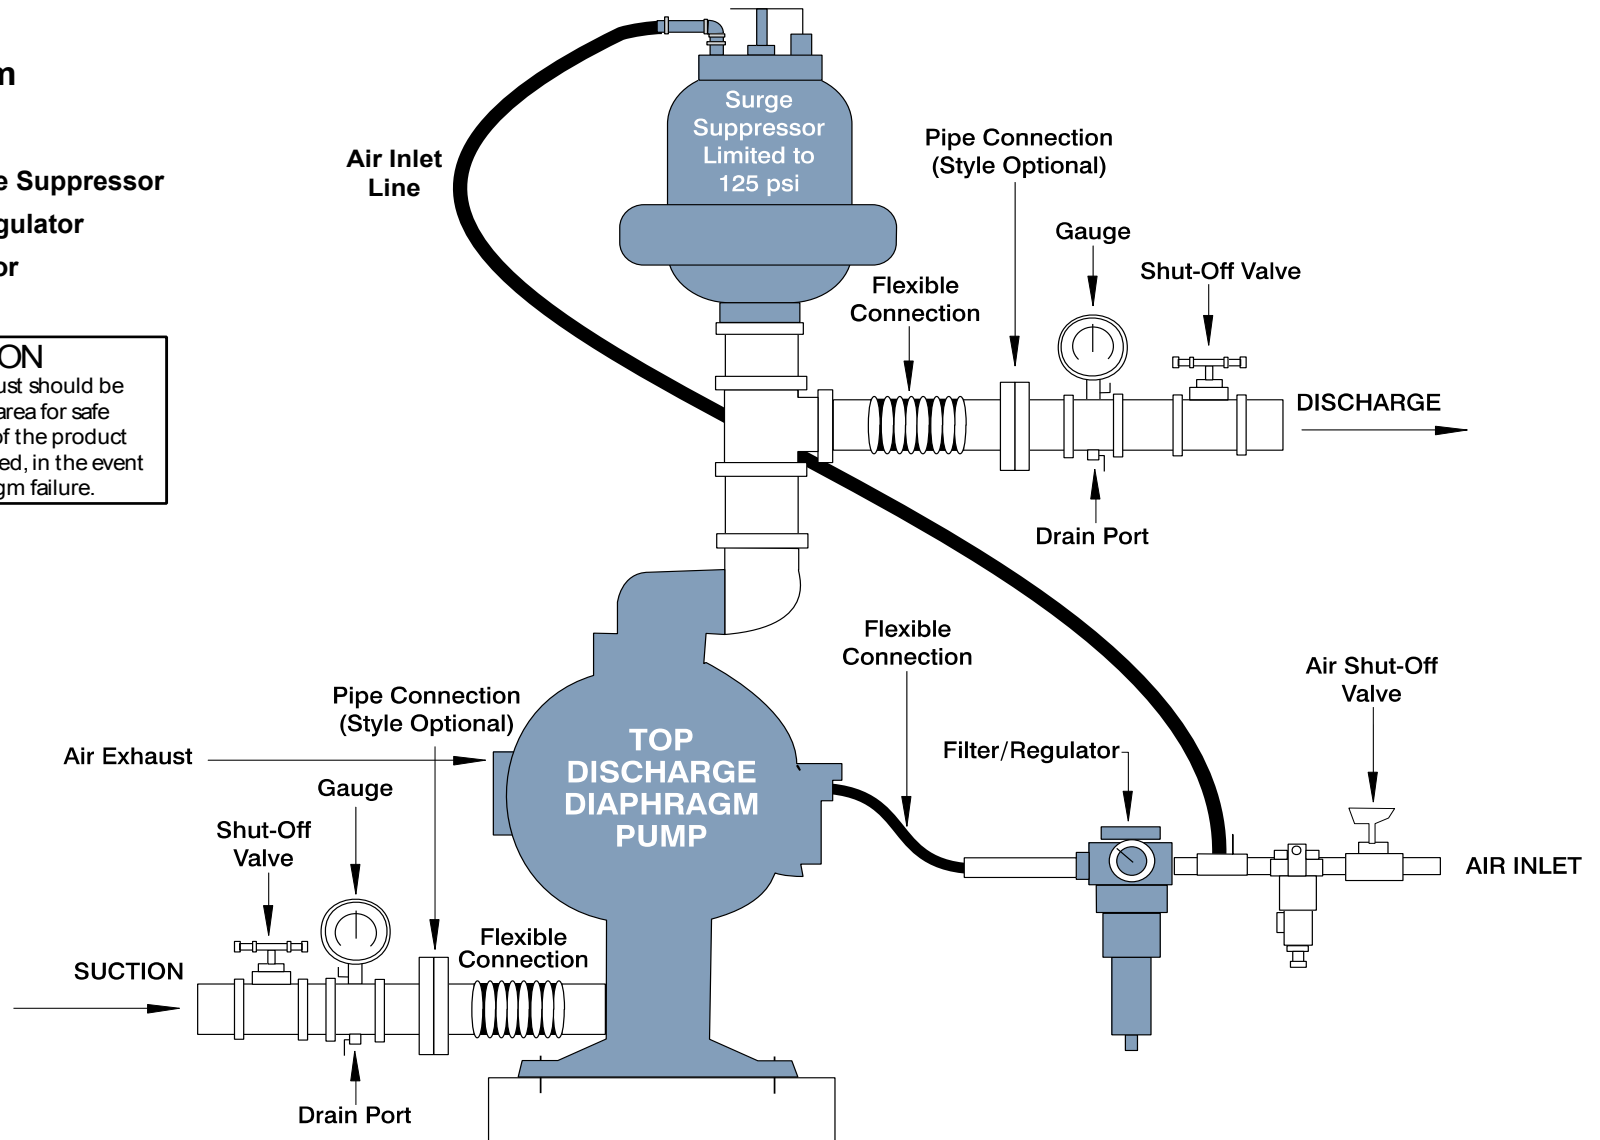

TROUBLESHOOTING

Possible Symptoms:

- Pump will not cycle.
- Pump cycles, but produces no flow.
- Pump cycles, but flow rate is unsatisfactory.
- Pump cycle seems unbalanced.
- Pump cycle seems to produce excessive vibration.

What to Check: Excessive suction lift in system.

Corrective Action: For lifts exceeding 20 feet (6 meters), filling the pumping chambers with liquid will prime the pump in most cases.

What to Check: Excessive flooded suction in system.

Corrective Action: For flooded conditions exceeding 10 feet (3 meters) of liquid, install a back pressure device.

What to Check: System head exceeds air supply pressure.

Corrective Action: Increase the inlet air pressure to the pump. Most diaphragm pumps are designed for 1:1 pressure ratio at zero flow.

What to Check: Air supply pressure or volume exceeds system head.

Corrective Action: Decrease inlet air pressure and volume to the pump as calculated on the published PERFORMANCE CURVE. Pump is cavitating the fluid by fast cycling.

What to Check: Undersized suction line.

Corrective Action: Meet or exceed pump connection recommendations shown on the DIMENSIONAL DRAWING.

What to Check: Restricted or undersized air line.

Corrective Action: Install a larger air line and connection. Refer to air inlet recommendations shown in your pump's SERVICE MANUAL.

What to Check: Check ESADS+Plus, the Externally Serviceable Air Distribution System of the pump.

Corrective Action: Disassemble and inspect the main air distribution valve, pilot valve and pilot valve actuators. Refer to the parts drawing and air valve section of the SERVICE MANUAL. Check for clogged discharge or closed valve before reassembly.

What to Check: Rigid pipe connections to pump.

Corrective Action: Install flexible connectors and a MARATHON surge suppressor.

What to Check: Blocked air exhaust muffler.

Corrective Action: Remove muffler screen, clean or de-ice and reinstall. Refer to the Air Exhaust section of your pump SERVICE MANUAL.

What to Check: Pumped fluid in air exhaust muffler.

Corrective Action: Disassemble pump chambers. Inspect for diaphragm rupture or loose diaphragm plate assembly. Refer to the Diaphragm Replacement section of your pump SERVICE MANUAL.

What to Check: Suction side air leakage or air in product.

Corrective Action: Visually inspect all suction side gaskets and pipe connections.

What to Check: Obstructed check valve.

Corrective Action: Disassemble the wet end of the pump and manually dislodge obstruction in the check valve pocket. Refer to the Check Valve section of the pump SERVICE MANUAL for disassembly instructions.

What to Check: Worn or misaligned check valve or check valve seat.

Corrective Action: Inspect check valves and seats for wear and proper seating. Replace if necessary. Refer to Check Valve section of the pump SERVICE MANUAL for disassembly instructions.

What to Check: Blocked suction line.

Corrective Action: Remove or flush obstruction. Check and clear all suction screens and strainers.

What to Check: Blocked discharge line.

Corrective Action: Check for obstruction or closed discharge line valves.

What to Check: Blocked pumping chamber.

Corrective Action: Disassemble and inspect the wetted chambers of the pump. Remove or flush any obstructions. Refer to the pump SERVICE MANUAL for disassembly instructions.

What to Check: Entrained air or vapor lock in one or both pumping chambers.

Corrective Action: Purge chambers through tapped chamber vent plugs. PURGING THE CHAMBERS OF AIR CAN BE DANGEROUS! Contact the MARATHON Technical Services Group before performing this procedure. Any model with top-ported discharge will reduce or eliminate problems with entrained air.

If your pump continues to perform below your expectations, contact your local MARATHON Distributor or factory Technical Services Group for a service evaluation.

WARRANTY

Refer to the enclosed MARATHON Warranty Certificate.

Recycling

Many components of MARATHON® Metallic AODD pumps are made of recyclable materials (see chart on page 10 for material specifications). We encourage pump users to recycle worn out parts and pumps whenever possible, after any hazardous pumped fluids are thoroughly flushed.

IMPORTANT SAFETY INFORMATION



! IMPORTANT
Read these safety warnings and instructions in this manual completely, before installation and start-up of the pump. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.



! CAUTION
Before pump operation, inspect all gasketed fasteners for looseness caused by gasket creep. Retorque loose fasteners to prevent leakage. Follow recommended torques stated in this manual.



! WARNING
Before maintenance or repair, shut off the compressed air line, bleed the pressure, and disconnect the air line from the pump. The discharge line may be pressurized and must be bled of its pressure.



! WARNING
In the event of diaphragm rupture, pumped material may enter the air end of the pump, and be discharged into the atmosphere. If pumping a product which is hazardous or toxic, the air exhaust must be piped to an appropriate area for safe disposition.



! WARNING

Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers or other miscellaneous equipment must be grounded. (See page 28)



! WARNING

This pump is pressurized internally with air pressure during operation. Always make certain that all bolting is in good condition and that all of the correct bolting is reinstalled during assembly.



! WARNING

When used for toxic or aggressive fluids, the pump should always be flushed clean prior to disassembly.



! WARNING

Before doing any maintenance on the pump, be certain all pressure is completely vented from the pump, suction, discharge, piping, and all other openings and connections. Be certain the air supply is locked out or made non-operational, so that it cannot be started while work is being done on the pump. Be certain that approved eye protection and protective clothing are worn all times in the vicinity of the pump. Failure to follow these recommendations may result in serious injury or death.



! WARNING

Airborne particles and loud noise hazards. Wear ear and eye protection.

Material Codes

The Last 3 Digits of Part Number

| | | | | | | | |
|-----|--|-----|---|-----|---------------------------------------|-----|---|
| 000 | Assembly, sub-assembly; and some purchased items | 180 | Copper Alloy | 378 | High Density Polypropylene | 604 | PTFE |
| 010 | Cast Iron | 305 | Carbon Steel, Black Epoxy Coated | 379 | Conductive Nitrile | 606 | PTFE |
| 012 | Powered Metal | 306 | Carbon Steel, Black PTFE Coated | 405 | Cellulose Fibre | 607 | Envelon |
| 015 | Ductile Iron | 307 | Aluminum, Black Epoxy Coated | 408 | Cork and Neoprene | 608 | Conductive PTFE |
| 020 | Ferritic Malleable Iron | 308 | Stainless Steel, Black PTFE Coated | 425 | Compressed Fibre | 610 | PTFE Integral Silicon |
| 025 | Music Wire | 309 | Aluminum, Black PTFE Coated | 426 | Blue Gard | 611 | PTFE Integral FKM |
| 080 | Carbon Steel, AISI B-1112 | 310 | PVDF Coated | 440 | Vegetable Fibre | 632 | Neoprene/Hytrel |
| 100 | Alloy 20 | 330 | Zinc Plated Steel | 465 | Fibre | 633 | FKM (Fluorocarbon)/PTFE |
| 110 | Alloy Type 316 Stainless Steel | 331 | Chrome Plated Steel | 500 | Delrin 500 | 634 | EPDM/PTFE |
| 111 | Alloy Type 316 Stainless Steel (Electro Polished) | 332 | Aluminum, Electroless Nickel Plated | 501 | Delrin 570 | 635 | Neoprene/PTFE |
| 112 | Alloy C | 333 | Carbon Steel, Electroless Nickel Plated | 502 | Conductive Acetal, ESD-800 | 637 | PTFE, FKM (Fluorocarbon)/PTFE |
| 113 | Alloy Type 316 Stainless Steel (Hand Polished) | 335 | Galvanized Steel | 503 | Conductive Acetal, Glass-Filled | 638 | PTFE, Hytrel/PTFE |
| 114 | 303 Stainless Steel | 336 | Zinc Plated Yellow Brass | 505 | Acrylic Resin Plastic | 639 | Nitrile/TFE |
| 115 | 302/304 Stainless Steel | 337 | Silver Plated Steel | 506 | Delrin 150 | 643 | Santoprene/EPDM |
| 117 | 440-C Stainless Steel (Martensitic) | 340 | Nickel Plated | 520 | Injection Molded PVDF Natural color | 644 | Santoprene/PTFE |
| 120 | 416 Stainless Steel (Wrought Martensitic) | 342 | Filled Nylon | 521 | Conductive PVDF | 650 | Bonded Santoprene and PTFE |
| 123 | 410 Stainless Steel (Wrought Martensitic) | 353 | Geolast; Color: Black | 540 | Nylon | 654 | Santoprene Diaphragm, PTFE Overlay Balls and seals |
| 148 | Hardcoat Anodized Aluminum | 354 | Injection Molded #203-40 Santoprene- Duro 40D +/-5; Color: RED | 541 | Nylon | 656 | Santoprene Diaphragm and Check Balls/EPDM Seats |
| 149 | 2024-T4 Aluminum | 355 | Thermal Plastic | 542 | Nylon | 661 | EPDM/Santoprene |
| 150 | 6061-T6 Aluminum | 356 | Hytrel | 544 | Nylon Injection Molded | | |
| 151 | 6063-T6 Aluminum | 357 | Injection Molded Polyurethane | 550 | Polyethylene | | Delrin and Hytrel are registered tradenames of E.I. DuPont. |
| 152 | 2024-T4 Aluminum (2023-T351) | 358 | Urethane Rubber (Some Applications) (Compression Mold) | 551 | Glass Filled Polypropylene | | Gylon is a registered tradename of Garlock, Inc. |
| 154 | Almag 35 Aluminum | 359 | Urethane Rubber | 552 | Unfilled Polypropylene | | Nylatron is a registered tradename of Polymer Corp. |
| 155 | 356-T6 Aluminum | 360 | Nitrile Rubber. Color coded: RED | 553 | Unfilled Polypropylene | | Santoprene is a registered tradename of Exxon Mobil Corp. |
| 156 | 356-T6 Aluminum | 361 | FDA Accepted Nitrile | 555 | Polyvinyl Chloride | | Rulon II is a registered tradename of Dixon Industries Corp. |
| 157 | Die Cast Aluminum Alloy #380 | 363 | FKM (Fluorocarbon). Color coded: YELLOW | 556 | Black Vinyl | | Ryton is a registered tradename of Phillips Chemical Co. |
| 158 | Aluminum Alloy SR-319 | 364 | E.P.D.M. Rubber. Color coded: BLUE | 557 | Conductive Polypropylene | | Valox is a registered tradename of General Electric Co. |
| 159 | Anodized Aluminum | 365 | Neoprene Rubber. Color coded: GREEN | 558 | Conductive HDPE | | MARATHON, PortaPump and SludgeMaser are registered tradenames of Warren Rupp, Inc. |
| 162 | Brass, Yellow, Screw Machine Stock | 366 | Food Grade Nitrile | 559 | Glass-Filled Conductive Polypropylene | | |
| 165 | Cast Bronze, 85-5-5-5 | 368 | Food Grade EPDM | 570 | Rulon II | | |
| 166 | Bronze, SAE 660 | 370 | Butyl Rubber. Color coded: BROWN | 580 | Ryton | | |
| 170 | Bronze, Bearing Type, Oil Impregnated | 371 | Philthane (Tuftane) | 590 | Valox | | |
| 175 | Die Cast Zinc | 374 | Carboxylated Nitrile | 591 | Nylatron G-S | | |
| | | 375 | Fluorinated Nitrile | 592 | Nylatron NSB | | |
| | | | | 600 | PTFE (virgin material) | | |
| | | | | 601 | Tetrafluorocarbon (TFE) | | |
| | | | | 602 | PTFE (Bronze and moly filled) | | |
| | | | | 603 | Filled PTFE | | |
| | | | | | Blue Gylon | | |


Composite Repair Parts Drawing

AVAILABLE SERVICE AND CONVERSION KITS

- 476-228-000 AIR END KIT (Aluminum Center)**
Seals, O-ring, Gaskets, Retaining Rings, Air Valve Sleeve and Spool Set, and Pilot Valve Assembly.
- 476-201-000 AIR END KIT (Air Valve with Stroke Indicator Pin, Aluminum Center)**
Seals, O-ring, Gaskets, Retaining Rings, Air Valve Sleeve and Spool Set, and Pilot Valve Assembly.
- 476-194-354 WET END KIT**
Santoprene Diaphragms, Balls and Polyethylene Seats.
- 476-194-360 WET END KIT**
Nitrile Diaphragms, Balls, and Polyethylene Seats.
- 476-194-365 WET END KIT**
Neoprene Diaphragms, Balls, and Polyethylene Seats.
- 476-194-633 WET END KIT**
FKM Diaphragms, PTFE Overlay, PTFE Balls and Seats.
- 476-194-635 WET END KIT**
Neoprene Diaphragms, PTFE Overlay Balls and Seats.
- 476-194-654 WET END KIT**
Santoprene Diaphragms, PTFE Overlay, PTFE Balls, PTFE Seats.
- 476-194-661 WET END KIT**
EPDM Diaphragms, Santoprene Balls and Polyethylene Seats.
- 476-194-659 WETTED END KIT**
One-Piece Bonded PTFE/Nitrile Diaphragm, PTFE Balls, PTFE Seats.

HARDWARE KITS

- 475-212-330** Zinc Plated Capscrews, Washers, and Hex Nuts.
- 475-212-115** Stainless Steel Capscrews, Washers, and Hex Nuts.

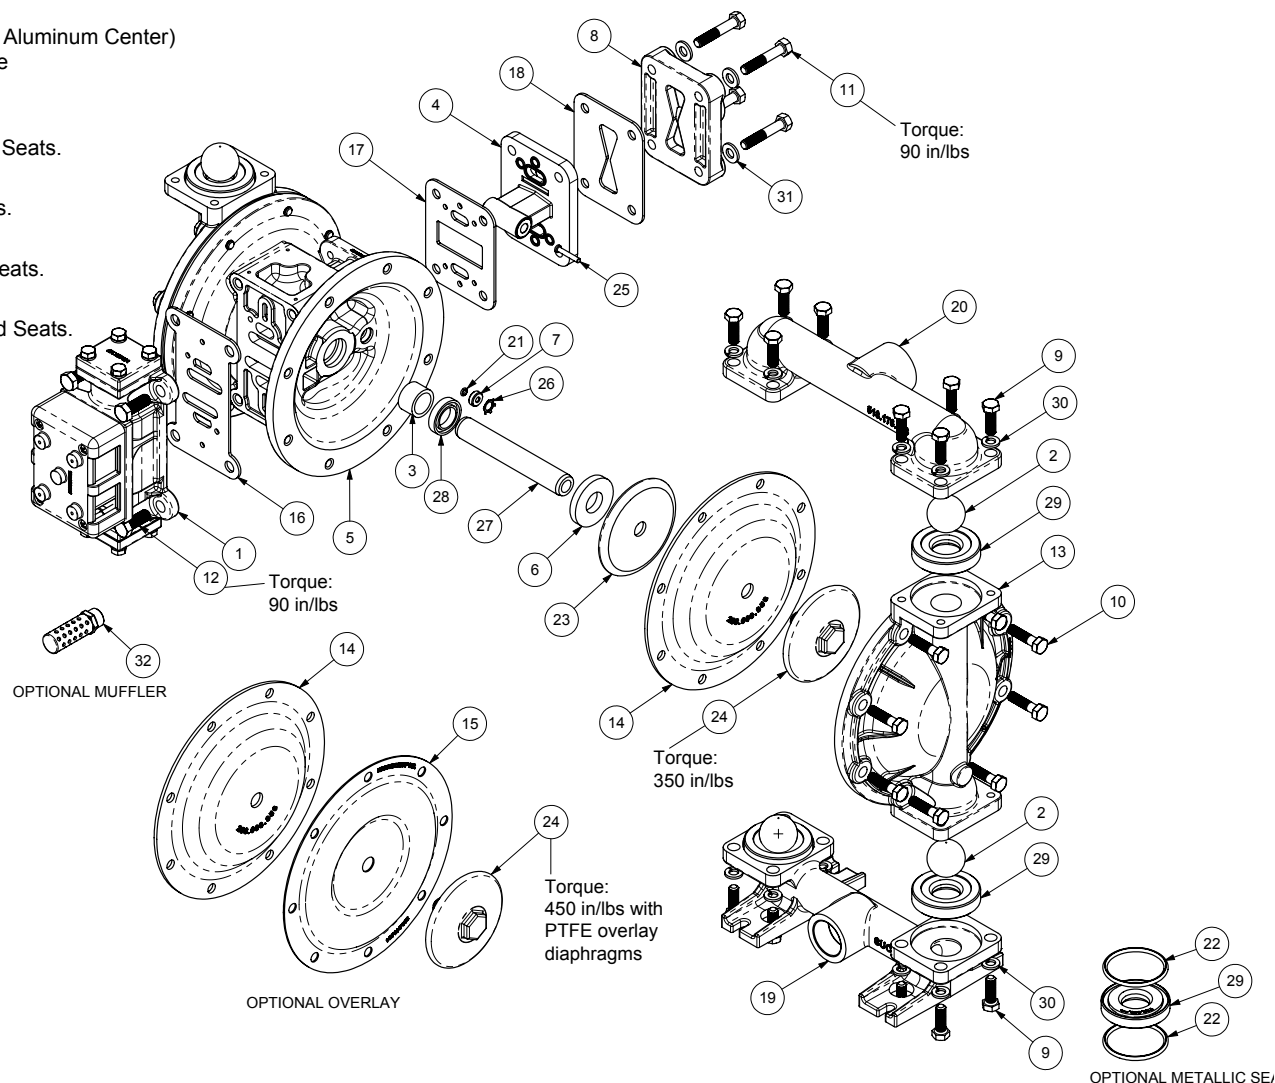


Composite Repair Parts List

| ITEM | PART NUMBER | DESCRIPTION | QTY | ITEM | PART NUMBER | DESCRIPTION | QTY |
|------|-----------------|---|-----|--|----------------------------------|---|-----|
| 1 | 031-179-000 | Air Valve Assembly (Cast Iron Centers Only) | 1 | 17 | 360-103-360 | Gasket, Pilot Valve | 1 |
| | 031-146-000 | Air Valve Assembly (Stroke Indicator) | 1 | 18 | 360-104-379 | Gasket, Air Inlet Cap | 1 |
| | 031-147-000 | Air Valve Assembly (Stroke Indicator) | 1 | 19 | 518-175-156 | Manifold, Suction | 1 |
| | 031-183-000 | Air Valve Assembly | 1 | | 518-175-156E | Manifold, Suction 1" BSP Tapered | 1 |
| | 031-183-001 | Air Valve Assembly | 1 | | 518-175-010 | Manifold, Suction | 1 |
| | | (W/Stainless Steel Hardware) | 1 | | 518-175-010E | Manifold, Suction 1" BSP Tapered | 1 |
| | 031-173-000 | Air Valve Assembly | 1 | | 518-175-110 | Manifold, Suction | 1 |
| | | (W/ Aluminum centers only) | 1 | | 518-175-110E | Manifold, Suction 1" BSP Tapered | 1 |
| | 031-173-001 | Air Valve Assembly | 1 | 20 | 518-176-156 | Manifold, Discharge | 1 |
| | | (W/ Stainless Steel Hardware only) | 1 | | 518-176-156E | Manifold, Discharge 1" BSP Tapered | 1 |
| | 031-140-000 | Air Valve Assembly w/Integral muffler | 1 | | 518-176-010 | Manifold, Discharge | 1 |
| | | (Cast Iron Centers Only) | 1 | | 518-176-010E | Manifold, Discharge 1" BSP Tapered | 1 |
| | 031-141-000 | Air Valve Assembly (Cast Iron Centers Only) | 1 | | 518-176-110 | Manifold, Discharge | 1 |
| | | | | | 518-176-110E | Manifold, Discharge 1" BSP Tapered | 1 |
| 2 | 050-028-354 | Ball, Check | 4 | 21 | 560-001-360 | O-Ring | 2 |
| | 050-028-360 | Ball, Check | 4 | 22 | 560-091-360 | Seal (Check Valve) (See item 29) | 8 |
| | 050-028-365 | Ball, Check | 4 | | 560-091-363 | Seal (Check Valve) (See item 29) | 8 |
| | 050-028-600 | Ball, Check | 4 | | 560-091-364 | Seal (Check Valve) (See item 29) | 8 |
| 3 | 070-012-170 | Bushing | 2 | | 560-091-365 | Seal (Check Valve) (See item 29) | 8 |
| 4 | 095-110-000 | Pilot Valve Assembly | 1 | | 560-091-611 | Seal (Check Valve) (See item 29) | 8 |
| | 095-110-558 | Pilot Valve Assembly | 1 | 23 | 612-022-330 | Plate, Inner Diaphragm | 2 |
| | | (Cast Iron Centers Only) | | | 612-218-330 | Plate, Inner Diaphragm | 2 |
| 5 | 114-025-157 | Intermediate | 1 | | | (use with One-Piece Bonded) | |
| | 114-025-010 | Intermediate | 1 | 24 | 612-108-157 | Plate, Outer Diaphragm Assembly | 2 |
| 6 | 132-019-360 | Bumper | 2 | | 612-101-082 | Plate, Outer Diaphragm Assembly | 2 |
| 7 | 135-036-506 | Bushing | 2 | | 612-101-110 | Plate, Outer Diaphragm Assembly | 2 |
| 8 | 165-120-157 | Cap, Air Inlet Assembly | 1 | 25 | 620-022-115 | Pin, Actuator | 2 |
| | 165-120-010 | Cap, Air Inlet Assembly | 1 | 26 | 675-042-115 | Ring, Retaining | 2 |
| 9 | 170-044-115 | Capscrew, Hex Hd 5/16-18 X 1.00 | 16 | 27 | 685-060-120 | Rod, Diaphragm | 1 |
| | 170-044-330 | Capscrew, Hex Hd 5/16-18 X 1.00 | 16 | 28 | 720-010-375 | Seal, U-Cup | 2 |
| 10 | 170-045-115 | Capscrew, Hex Hd 5/16-18 X 1.25 | 16 | 29 | 722-098-550 | Seat, Check Ball | 4 |
| | 170-045-330 | Capscrew, Hex Hd 5/16-18 X 1.25 | 16 | | 722-098-080 | Seat, Check Ball (seals required see item 22) | 4 |
| 11 | 170-069-115 | Capscrew, Hex Hd 5/16-18 X 1.75 | 4 | | 722-098-110 | Seat, Check Ball (seals required see item 22) | 4 |
| | 170-069-330 | Capscrew, Hex Hd 5/16-18 X 1.75 | 4 | | 722-098-150 | Seat, Check Ball (seals required see item 22) | 4 |
| 12 | 171-053-115 | Capscrew, Hex Soc 3/8-16 X 2.50 | 4 | | 722-098-600 | Seat, Check Ball | 4 |
| | | (Stroke Indicator option only) | | 30 | 900-004-330 | Lock Washer, 5/16 | 16 |
| | 171-053-330 | Capscrew, Hex Soc 3/8-16 X 2.50 | 4 | | 900-004-115 | Lock Washer, 5/16 | 16 |
| | | (Stroke Indicator option only) | | 31 | 901-038-330 | Flat Washer, 5/16 | 4 |
| | 170-006-115 | Capscrew, Hex HD 3/8-16 X 1.00 | 4 | | 901-038-115 | Flat Washer, 5/16 | 4 |
| | 170-006-330 | Capscrew, Hex HD 3/8-16 X 1.00 | 4 | 32 | 530-033-000 | Muffler, Metal | 1 |
| 13 | 196-173-156/157 | Chamber, Outer | 2 | Parts not shown used with Raised Face Flange Porting Option | | | |
| | 196-173-010 | Chamber, Outer | 2 | 170-044-330 | Hex Cap Screw | | 4 |
| | 196-173-110 | Chamber, Outer | 2 | 326-050-080 | Mounting Bracket | | 2 |
| 14 | 286-008-354 | Diaphragm | 2 | 334-112-110 | 1" Raised Face, 150# ANSI Flange | | 2 |
| | 286-008-360 | Diaphragm | 2 | 538-035-110 | Pipe Nipple 1" NPT x 1½" | | 2 |
| | 286-008-363 | Diaphragm | 2 | 545-004-330 | Hex Nut | | 4 |
| | 286-008-364 | Diaphragm | 2 | 900-004-330 | Lock Washer | | 4 |
| | 286-008-365 | Diaphragm | 2 | 901-009-330 | Flat Washer | | 8 |
| | 286-112-000 | Diaphragm, One-Piece Bonded | 2 | | | | |
| 15 | 286-015-604 | Diaphragm, Overlay | 2 | | | | |
| 16 | 360-093-360 | Gasket, Air Valve | 1 | | | | |



Air Valve Servicing, Assembly Drawing & Parts List (Use With Aluminum Centers Only)

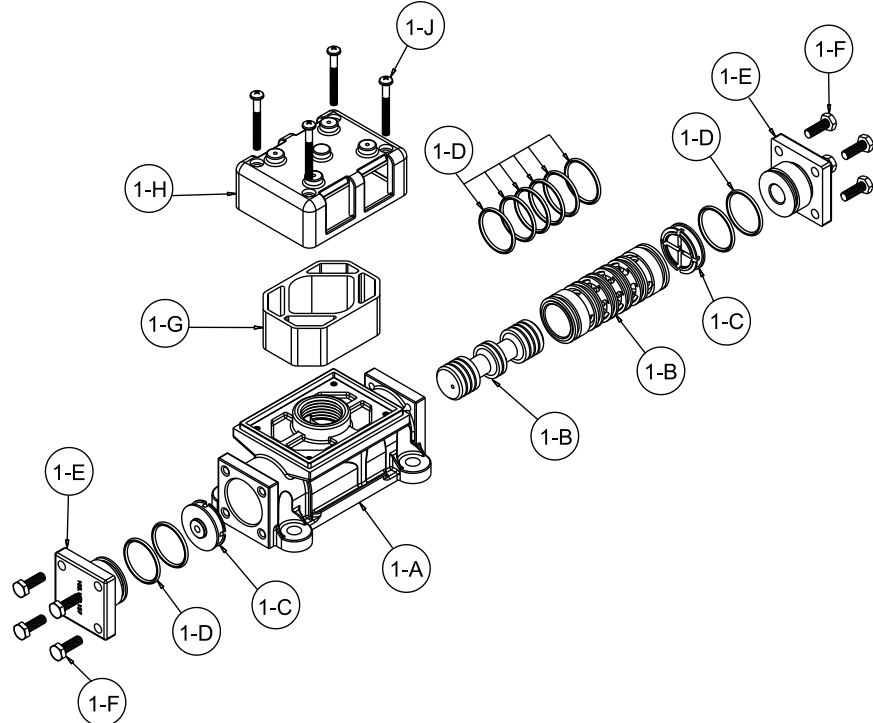

AIR DISTRIBUTION VALVE SERVICING

To service the air valve first shut off the compressed air, bleed pressure from the pump, and disconnect the air supply line from the pump.

Step #1: See COMPOSITE REPAIR PARTS DRAWING.

Using a 9/16" wrench or socket, remove the four hex capscrews (items 12). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 16) for cracks or damage. Replace gasket if needed.

Step #2: Disassembly of the air valve.

Using a 7/16" wrench or socket, remove the eight hex capscrews (items 1-F) that

fasten the end caps to the valve body. Next remove the two end caps (items 1-E). Inspect the two o-rings (items 1-D) on each end cap for damage or wear. Replace the o-rings as needed.

Remove the bumpers (items 1-C). Inspect the bumpers for damage or wear. Replace the bumpers as needed.

Remove the spool (part of item 1-B) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-B) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace with a new sleeve and spool set (item 1-B).

**AIR VALVE ASSEMBLY PARTS LIST

| Item | Part Number | Description | Qty |
|------|-------------|--------------------------------|-----|
| 1 | 031-173-000 | Air Valve Assembly | 1 |
| 1-A | 095-109-157 | Body, Air Valve | 1 |
| 1-B | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-C | 132-029-357 | Bumper | 2 |
| 1-D | 560-020-360 | O-Ring | 10 |
| 1-E | 165-127-157 | Cap, End | 2 |
| 1-F | 170-032-330 | Hex Head Capscrew 1/4-20 x .75 | 8 |
| 1-G | 530-028-550 | Muffler | 1 |
| 1-H | 165-096-551 | Muffler Cap | 1 |
| 1-J | 706-026-330 | Machine Screw | 4 |

**AIR VALVE ASSEMBLY PARTS LIST

| | | | |
|--|-------------|--------------------------------|---|
| 1 | 031-173-001 | Air Valve Assembly | 1 |
| Consists of all components above except: | | | |
| 1-F | 170-032-115 | Hex Head Capscrew 1/4-20 x .75 | 8 |
| 1-J | 706-026-115 | Machine Screw | 4 |

****Note:** Pumps equipped with these Valve Assemblies are not ATEX compliant.


Step #3: Reassembly of the air valve.

Install one bumper (item 1-C) and one end cap (item 1-E), with two o-rings (items 1-D), and fasten with four hex capscrews (items 1-F) to the valve body (item 1-A).

Remove the new sleeve and spool set (item 1-B) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-D) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-A), align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Carefully insert the sleeve into the bumper and end cap

(with o-rings) and fasten with the remaining hex capscrews.


Fasten the air valve assembly (item 1) and gasket to the pump. Connect the compressed air line to the pump. The pump is now ready for operation.



! IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Air Valve Servicing, Assembly Drawing & Parts List

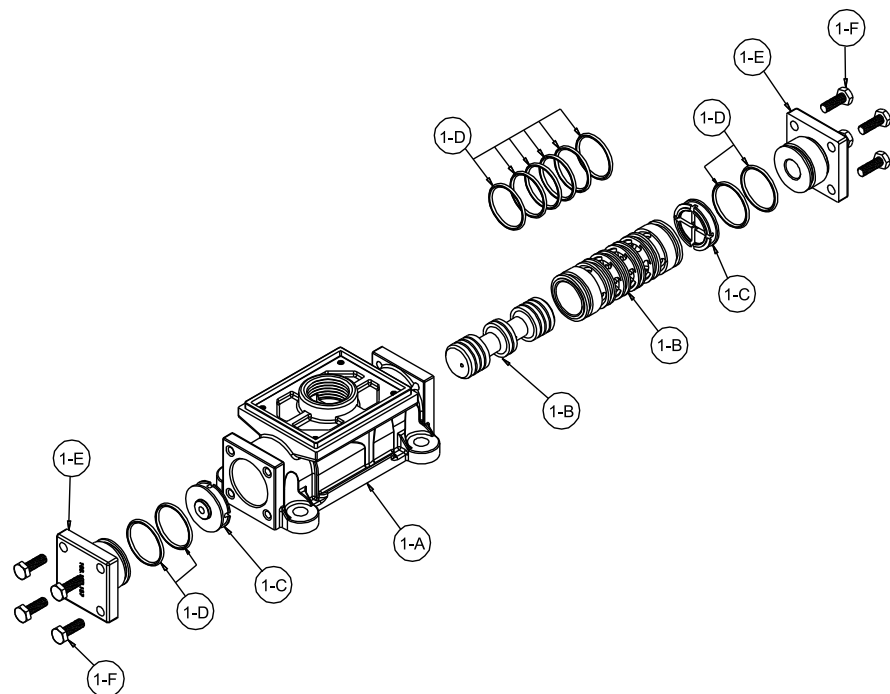

AIR DISTRIBUTION VALVE SERVICING

To service the air valve first shut off the compressed air, bleed pressure from the pump, and disconnect the air supply line from the pump.

Step #1: See COMPOSITE REPAIR PARTS DRAWING.

Using a 9/16" wrench or socket, remove the four hex capscrews (items 12). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 16) for cracks or damage. Replace gasket if needed.

Step #2: Disassembly of the air valve.

Using a 7/16" wrench or socket, remove the eight hex capscrews (items 1-F) that

fasten the end caps to the valve body. Next remove the two end caps (items 1-E). Inspect the two o-rings (items 1-D) on each end cap for damage or wear. Replace the o-rings as needed.

Remove the bumpers (items 1-C). Inspect the bumpers for damage or wear. Replace the bumpers as needed.

Remove the spool (part of item 1-B) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-B) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace with a new sleeve and spool set (item 1-B).

Step #3: Reassembly of the air valve.

Install one bumper (item 1-C) and one end cap (item 1-E), with two o-rings (items 1-D), and fasten with four hex capscrews (items 1-F) to the valve body (item 1-A).

Remove the new sleeve and spool set (item 1-B) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-D) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-A), align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Carefully insert the sleeve into the bumper and end cap (with o-rings) and fasten with the remaining hex capscrews.

Fasten the air valve assembly (item 1) and gasket to the pump. Connect the compressed air line to the pump. The pump is now ready for operation.

| AIR VALVE ASSEMBLY PARTS LIST (Use w/Aluminum center sections) | | | |
|--|-------------|--------------------------------|-----|
| Item | Part Number | Description | Qty |
| ⚠ 1 | 031-183-000 | Air Valve Assembly | 1 |
| 1-A | 095-109-157 | Body, Air Valve | 1 |
| 1-B | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-C | 132-029-357 | Bumper | 2 |
| 1-D | 560-020-360 | O-Ring | 10 |
| 1-E | 165-127-157 | Cap, End | 2 |
| 1-F | 170-032-330 | Hex Head Capscrew 1/4-20 x .75 | 8 |


| AIR VALVE ASSEMBLY PARTS LIST | | | |
|--|-------------|--------------------------------|---|
| ⚠ 1 | 031-183-001 | Air Valve Assembly | 1 |
| Consists of all components above except: | | | |
| 1-F | 170-032-115 | Hex Head Capscrew 1/4-20 x .75 | 8 |




⚠ IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Air Valve Assembly Drawing, Parts List (Use With Cast Iron Centers Only)

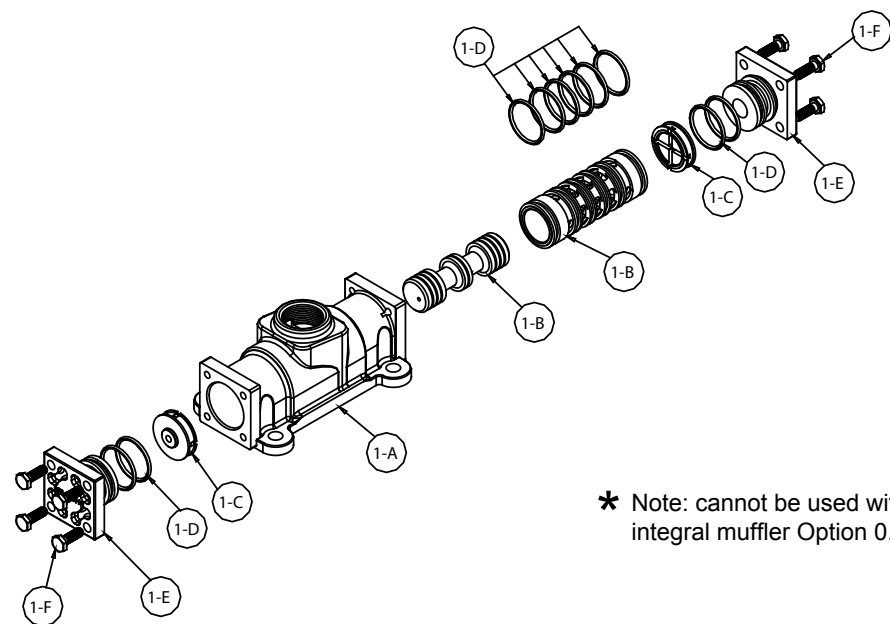

| Air Valve Assembly Parts List | | | |
|---|---------------|----------------------|-----|
| Item | Part Number | Description | Qty |
|  1 | 031-179-000 * | Gas Valve Assembly | 1 |
| 1-A | 095-109-110 | Valve Body | 1 |
| 1-B | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-C | 132-029-357 | Bumper | 2 |
| 1-D | 560-020-360 | O-Ring | 10 |
| 1-E | 165-127-110 | Cap, End | 2 |
| 1-F | 170-032-115 | Capscrew | 8 |



AIR DISTRIBUTION VALVE WITH STROKE INDICATOR OPTION SERVICING

To service the air valve first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump.

Step #1: See COMPOSITE REPAIR PARTS DRAWING.

Using a 5/16" Allen wrench, remove the four hex socket capscrews (item 12) and four flat washers (item 39). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 19) for cracks or damage. Replace gasket if needed.

Step #2: Disassembly of the air valve.

To access the internal air valve components first remove the two retaining rings (item 1-H) from each end of the air valve assembly using clip ring pliers.

Next remove the two end caps (item 1-E). Inspect the o-ring (items 1-G) for cuts or wear. Replace the o-rings if necessary.

Remove the spool (part of item 1-A) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-A) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace with a new sleeve and spool set (item 1-A).


Step #3: Reassembly of the air valve.

Install one end cap (item 1-E) with o-ring (item 1-G) into one end of the air valve body (item 1-B). Install one retaining ring (item 1-H), into the groove on the same end.

Remove the new sleeve and spool set (item 1-A) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-G) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-B). Align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Push the spool in until it touches the bumper on the opposite end.

Install the remaining end cap with

o-rings and retaining ring.
Fasten the air valve assembly (item 1) and gasket (item 19) to the pump.
Connect the compressed air line to the pump. Remove the safety clip. The pump is now ready for operation.




! IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Air Distribution Valve Assembly

(For Non-ATEX Cast Iron Centers)

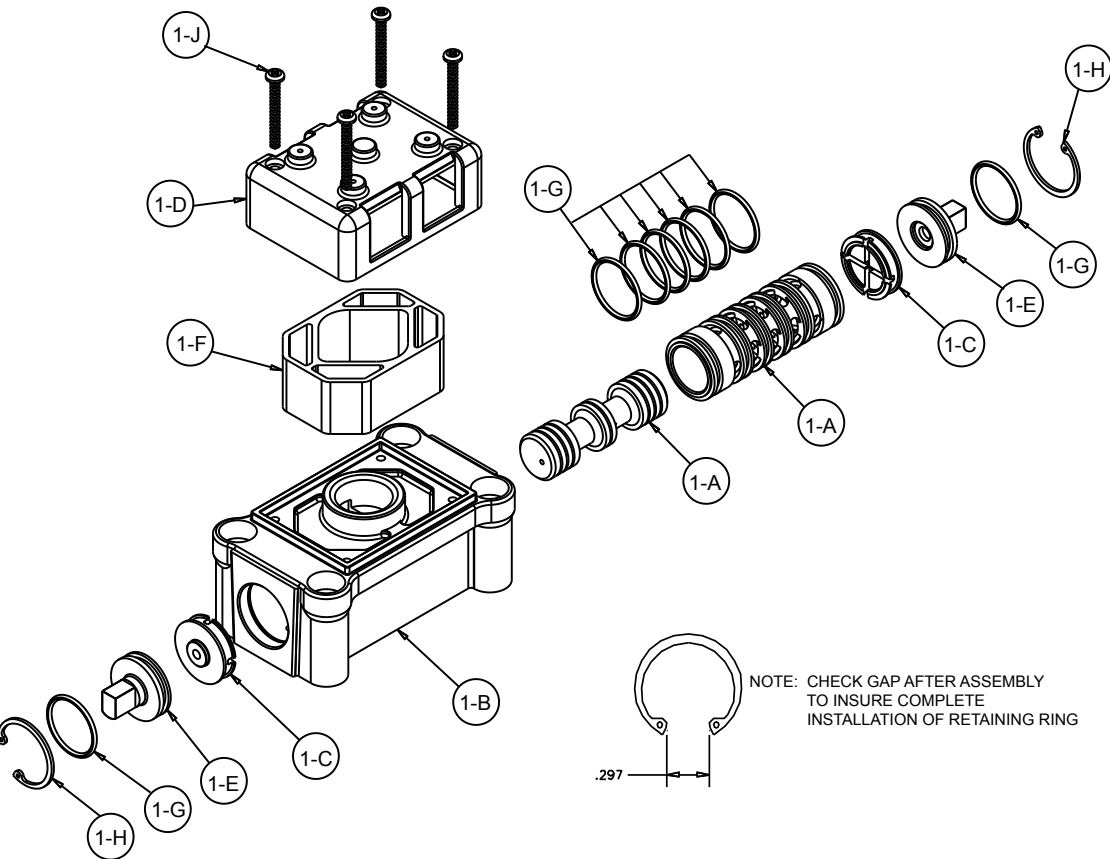

Air Distribution Valve Servicing

See repair parts drawing, remove screws.

- Step 1:** Remove end cap retainer (1-H).
- Step 2:** Remove end cap (1-E).
- Step 3:** Remove spool part of (1-A) (caution: do not scratch).
- Step 4:** Press sleeve (1-A) from body (1-B).
- Step 5:** Inspect O-Ring (1-H) and replace if necessary.
- Step 6:** Lightly lubricate O-Rings (1-H) on sleeve (1-A).
- Step 7:** Press sleeve (1-A) into body (1-B).
- Step 8:** Reassemble in reverse order, starting with step 3.

Note: Sleeve and spool (1-A) set is match ground to a specified clearance sleeve and spools (1-A) cannot be interchanged.

Air Valve Assembly Parts List

| Item | Part Number | Description | Qty |
|------|-------------|----------------------|-----|
| 1 | 031-140-000 | Air Valve Assembly | 1 |
| 1-A | 031-139-000 | Sleeve and Spool Set | 1 |
| 1-B | 095-094-551 | Body, Air Valve | 1 |
| 1-C | 132-029-552 | Bumper | 2 |
| 1-D | 165-096-551 | Cap, Muffer | 1 |
| 1-E | 165-115-558 | Cap, End | 2 |
| 1-F | 530-028-550 | Muffer | 1 |
| 1-G | 560-020-360 | O-Ring | 8 |
| 1-H | 675-044-115 | Ring, Retaining | 2 |
| 1-J | 710-015-115 | Screw, Self-tapping | 4 |

For Pumps with Alternate Mesh, Sound Dampening Mufflers or Piped Exhaust:


| | | | |
|---|-------------|--------------------|---|
| 1 | 031-141-000 | Air Valve Assembly | 1 |
| (Includes all items used on 031-140-000 minus items 1-D, 1-F & 1-J) | | | |

! IMPORTANT



Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Air Valve with Stroke Indicator Assembly Drawing, Parts List

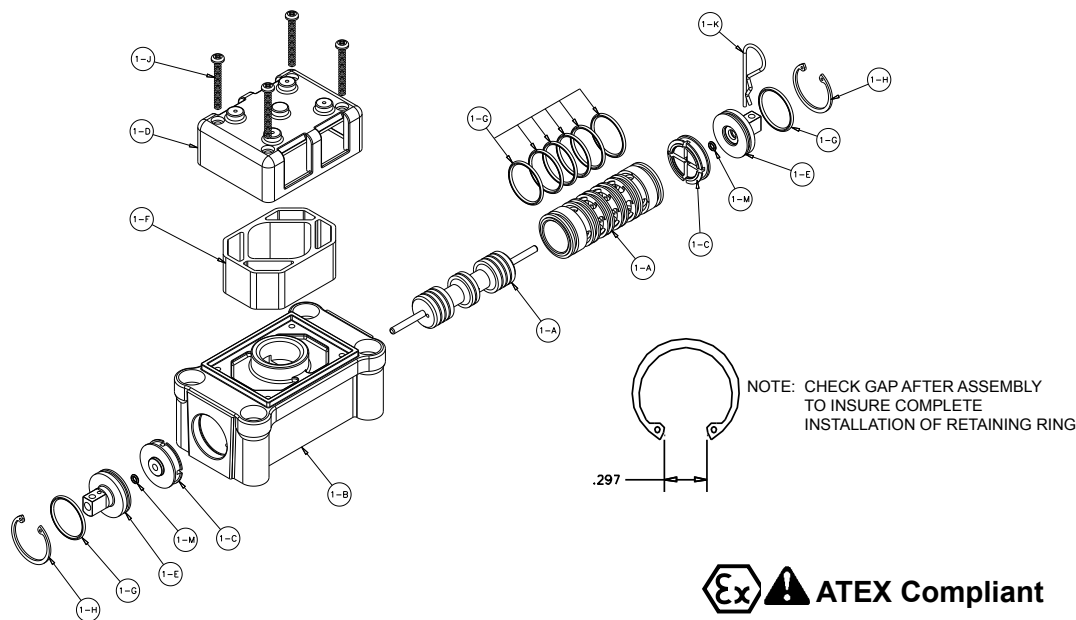

AIR VALVE ASSEMBLY PARTS LIST

| Item | Part Number | Description | Qty |
|------|-------------|----------------------|-----|
| ⚠ 1 | 031-146-000 | Air Valve Assembly | 1 |
| 1-A | 031-143-000 | Sleeve and Spool Set | 1 |
| 1-B | 095-094-559 | Body, Air Valve | 1 |
| 1-C | 132-029-552 | Bumper | 2 |
| 1-D | 165-096-559 | Cap, Muffler | 1 |
| 1-E | 165-098-147 | Cap, End | 2 |
| 1-F | 530-028-550 | Muffler | 1 |
| 1-G | 560-020-360 | O-Ring | 8 |
| 1-H | 675-044-115 | Ring, Retaining | 2 |
| 1-J | 710-015-115 | Screw, Self Tapping | 4 |
| 1-K | 210-008-330 | Clip, Safety | 1 |
| 1-M | 560-029-360 | O-Ring | 2 |

For Pumps with Alternate Mesh, Sound Dampening Mufflers or Piped Exhaust:

| | | | |
|--|-------------|--------------------|---|
| ⚠ 1 | 031-147-000 | Air Valve Assembly | 1 |
| (includes all items on 031-146-000 minus 1-D, 1-F, & 1-J). | | | |

AIR DISTRIBUTION VALVE WITH STROKE INDICATOR OPTION SERVICING

To service the air valve first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump.

Step #1: See COMPOSITE REPAIR PARTS DRAWING.

Using a 5/16" Allen wrench, remove the four hex socket capscrews (item 12) and four flat washers (item 39). Remove the air valve assembly from the pump.

Remove and inspect gasket (item 19) for cracks or damage. Replace gasket if needed.

Step #2: Disassembly of the air valve.

To access the internal air valve components first remove the two retaining

rings (item 1-H) from each end of the air valve assembly using clip ring pliers.

Next remove the two end caps (item 1-E). Inspect the o-ring (items 1-G and 1-M) for cuts or wear. Replace the o-rings if necessary.

Remove the two bumpers (item 1-C). Inspect the bumpers for cut, wear or abrasion. Replace if necessary.

Remove the spool (part of item 1-A) from the sleeve. Be careful not to scratch or damage the outer diameter of the spool. Wipe spool with a soft cloth and inspect for scratches or wear.

Inspect the inner diameter of the sleeve (part of item 1-A) for dirt, scratches, or other contaminants. Remove the sleeve if needed and replace with a new sleeve and spool set (item 1-A).

Step #3: Reassembly of the air valve.

Install one bumper (item 1-C) and one end cap (item 1-E) with o-rings (item 1-G and 1-M) into one end of the air valve body (item 1-B). Install one retaining ring (item 1-H), into the groove on the same end. Insert the safety clip (item 1-K) through the smaller unthreaded hole in the endcap.

Remove the new sleeve and spool set (item 1-A) from the plastic bag. Carefully remove the spool from the sleeve. Install the six o-rings (item 1-G) into the six grooves on the sleeve. Apply a light coating of grease to the o-rings before installing the sleeve into the valve body (item 1-B). Align the slots in the sleeve with the slots in the valve body. Insert the spool into the sleeve. Be careful not to scratch or damage the spool during installation. Push the spool in until the pin touches the safety clip on the opposite end.

Install the remaining bumper, end cap with o-rings and retaining ring.

Fasten the air valve assembly (item 1) and gasket (item 19) to the pump.

Connect the compressed air line to the pump. Remove the safety clip. The pump is now ready for operation.



⚠ IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Solenoid Shifted Air Valve Drawing

SOLENOID SHIFTED AIR VALVE PARTS LIST

(Includes all items used on Composite Repair Parts List except as shown)

| ITEM | PART NUMBER | DESCRIPTION | QTY |
|------|-------------|---|-----|
| 33 | 893-097-000 | Solenoid Valve, NEMA4 | 1 |
| 34 | 219-001-000 | Solenoid Coil, 24VDC | 1 |
| | 219-004-000 | Solenoid Coil, 24VAC/12VDC | 1 |
| | 219-002-000 | Solenoid Coil, 120VAC | 1 |
| | 219-003-000 | Solenoid Coil, 240VAC | 1 |
| 35 | 241-001-000 | Connector, conduit | 1 |
| | 241-003-000 | Conduit Connector with Suppression Diode (DC Only) | 1 |
| 36 | 170-045-330 | Capscrew, Hex HD 5/16-18 x 1.25 | 4 |
| 37 | 618-050-150 | Plug | 2 |



IEC EEX m T4



For Explosion Proof Solenoid Coils used in North America and outside the European Union.

| | | | |
|----|-------------|-----------------------------|---|
| 34 | 219-009-001 | Solenoid Coil, 120VAC 60 Hz | 1 |
| | 219-009-002 | Solenoid Coil, 240VAC 60 Hz | 1 |
| | 219-009-003 | Solenoid Coil, 12VDC | 1 |
| | 219-009-004 | Solenoid Coil, 24VDC | 1 |
| | 219-009-005 | Solenoid Coil, 110VAC 50 Hz | 1 |
| | 219-009-006 | Solenoid Coil, 230VAC 50 Hz | 1 |

Note: Item 35 (Conduit Connector) is not required



II 2G EEx m c II T5
II 3/2 G Ex m c II T5
II 2D c IP65 T100°C




For ATEX Compliant Solenoid Coils used in the European Union

| | | | |
|----|-------------|---|---|
| 34 | 219-011-001 | Solenoid Coil, Single mounting 12 VDC, 3.3W / 267mA | 1 |
| | 219-011-002 | Solenoid Coil, Single mounting 24 VDC, 3.3W / 136mA | 1 |
| | 219-011-003 | Solenoid Coil, Single mounting 110/120 VAC, 3.4W / 29mA | 1 |
| | 219-011-004 | Solenoid Coil, Single mounting 220/240 VAC, 3.4W / 15mA | 1 |

Note: Item 35 (Conduit Connector) is not required

Compressed Air Temperature Range: Maximum Ambient Temperature to plus 50°C

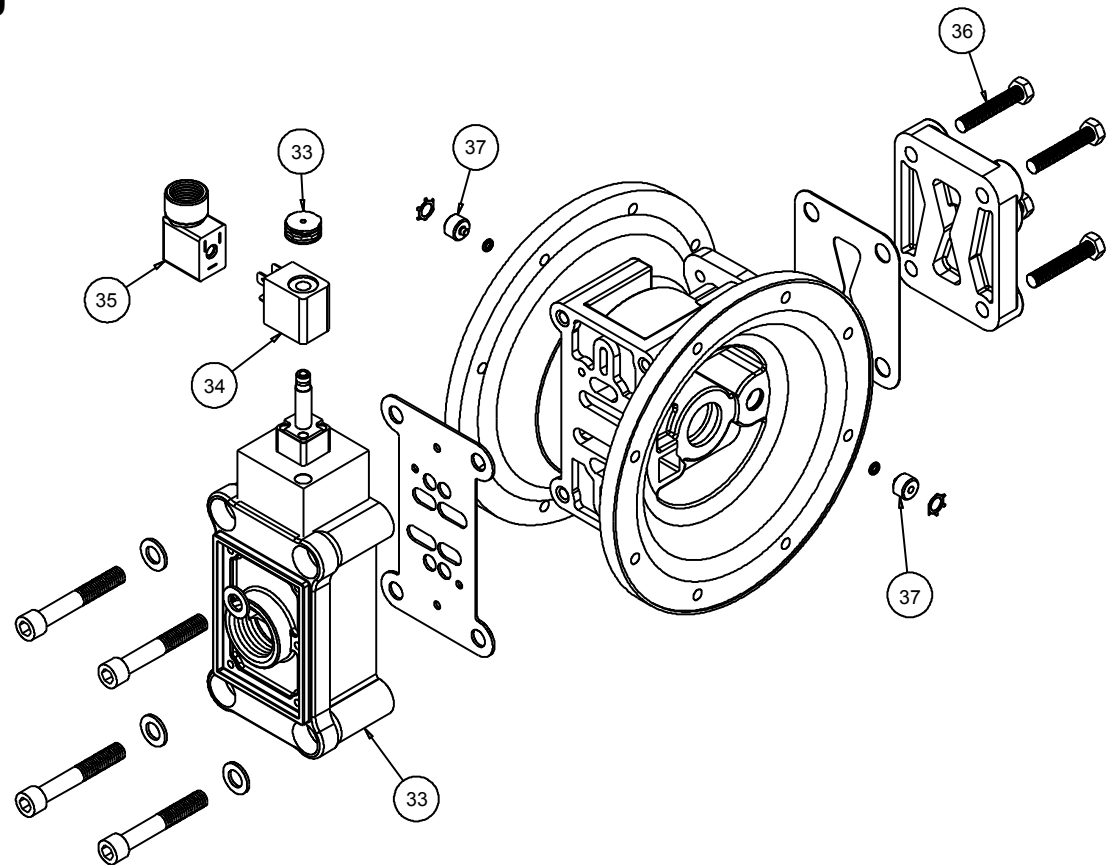

*Special Conditions For Safe Use

A fuse corresponding to its rated current (max. $3 \cdot I_{\text{rat}}$ according IEC 60127-2-1) or a motor protecting switch with short-circuit and thermal instantaneous tripping (set to rated current) shall be connected in series to each solenoid as short circuit protection. For very low rated currents of the solenoid the fuse of lowest current value according to the indicated IEC standard will be sufficient. The fuse may be accommodated in the associated supply unit or shall be separately arranged. The rated voltage to the fuse shall be equal to or greater than the stated rated voltage of the magnet coil. The breakage capacity of the fuse-link shall be as high as or higher than the maximum expected short circuit current at the location of the installation (usually 1500 A). A maximum permissible ripple of 20% is valid for all magnets of direct-current design.

SOLENOID SHIFTED AIR DISTRIBUTION VALVE OPTION


MARATHON's solenoid shifted, air distribution valve option utilizes electrical signals to precisely control your MARATHONs speed. The solenoid coil is connected to a customer - supplied control. Compressed air provides the pumping power, while electrical signals control pump speed (pumping rate).

OPERATION

The Solenoid Shifted MARATHON has a solenoid operated, air distribution valve in place of the standard MARATHONs pilot operated, air distribution valve. Where a pilot valve is normally utilized to cycle the pump's air distribution valve, an electric solenoid is utilized. As the solenoid is powered, one of the pump's air chambers is pressurized while the other chamber is exhausted. When electric power is turned off, the solenoid shifts and the pressurized chamber is exhausted while the other chamber is pressurized. By alternately applying and removing power to the solenoid, the pump cycles much like a standard MARATHON pump, with one exception. This option provides a way to precisely control and monitor pump speed.

BEFORE INSTALLATION


Before wiring the solenoid, make certain it is compatible with your system voltage.

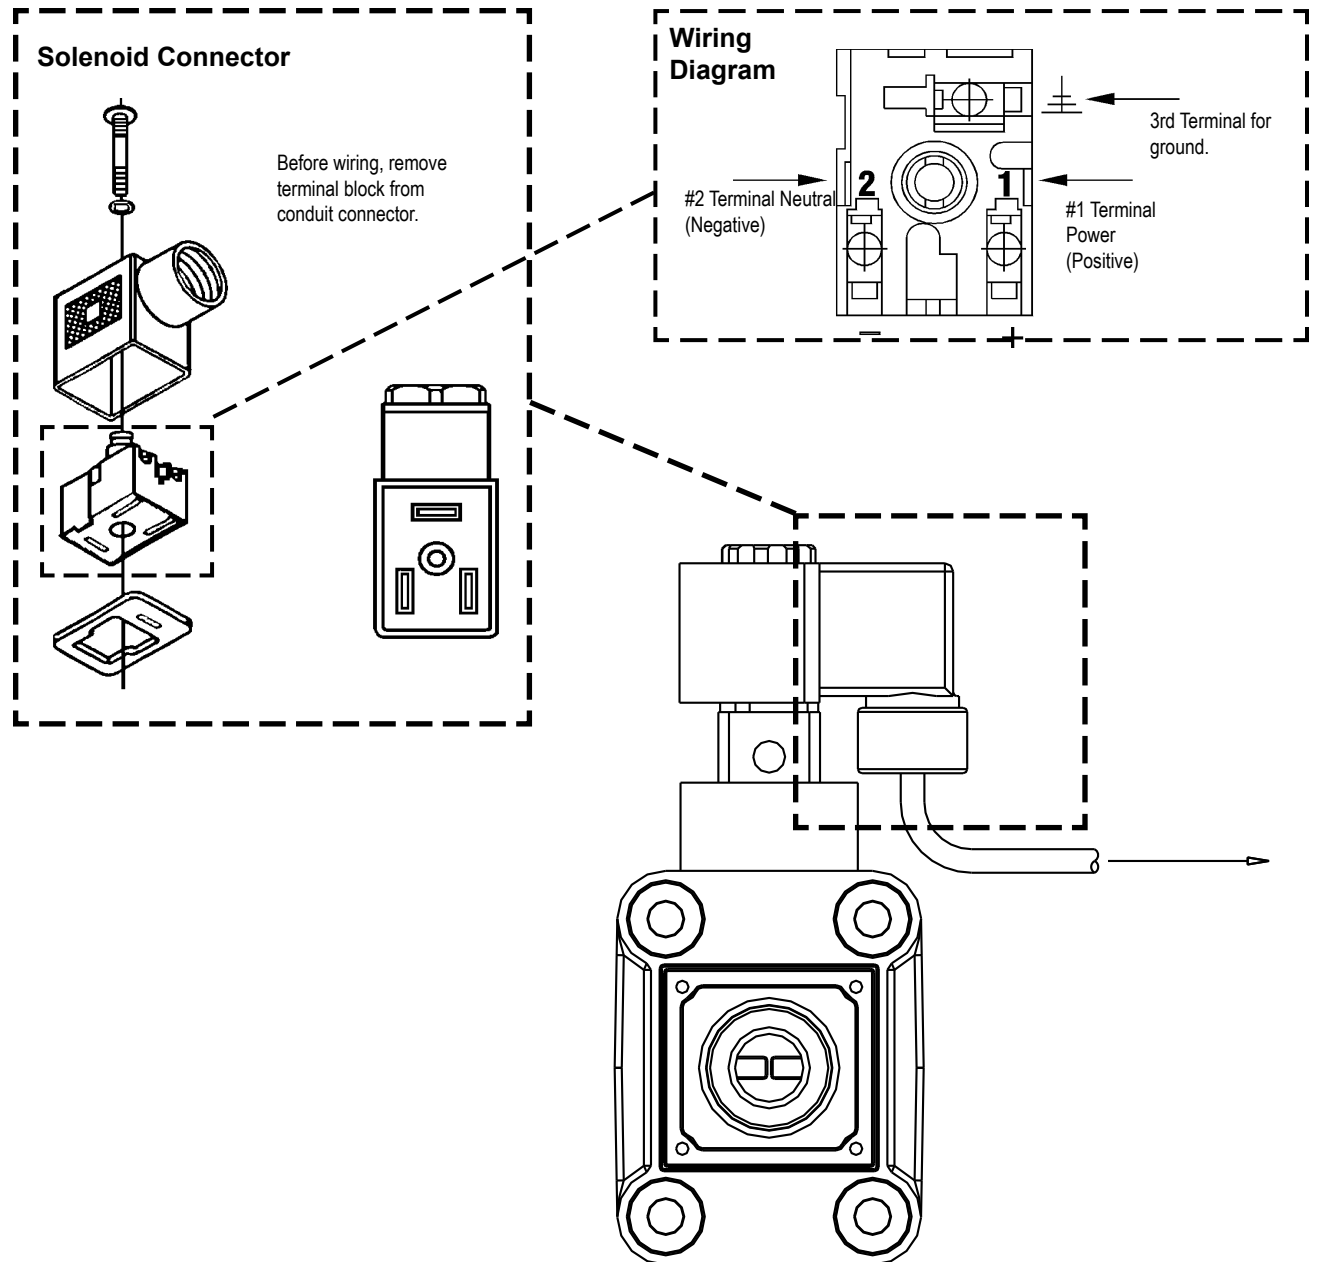

Diaphragm Service Drawing,
with Overlay

Diaphragm Service Drawing,
Non-Overlay

One-Piece Bonded
* DiaphragmService
Drawing

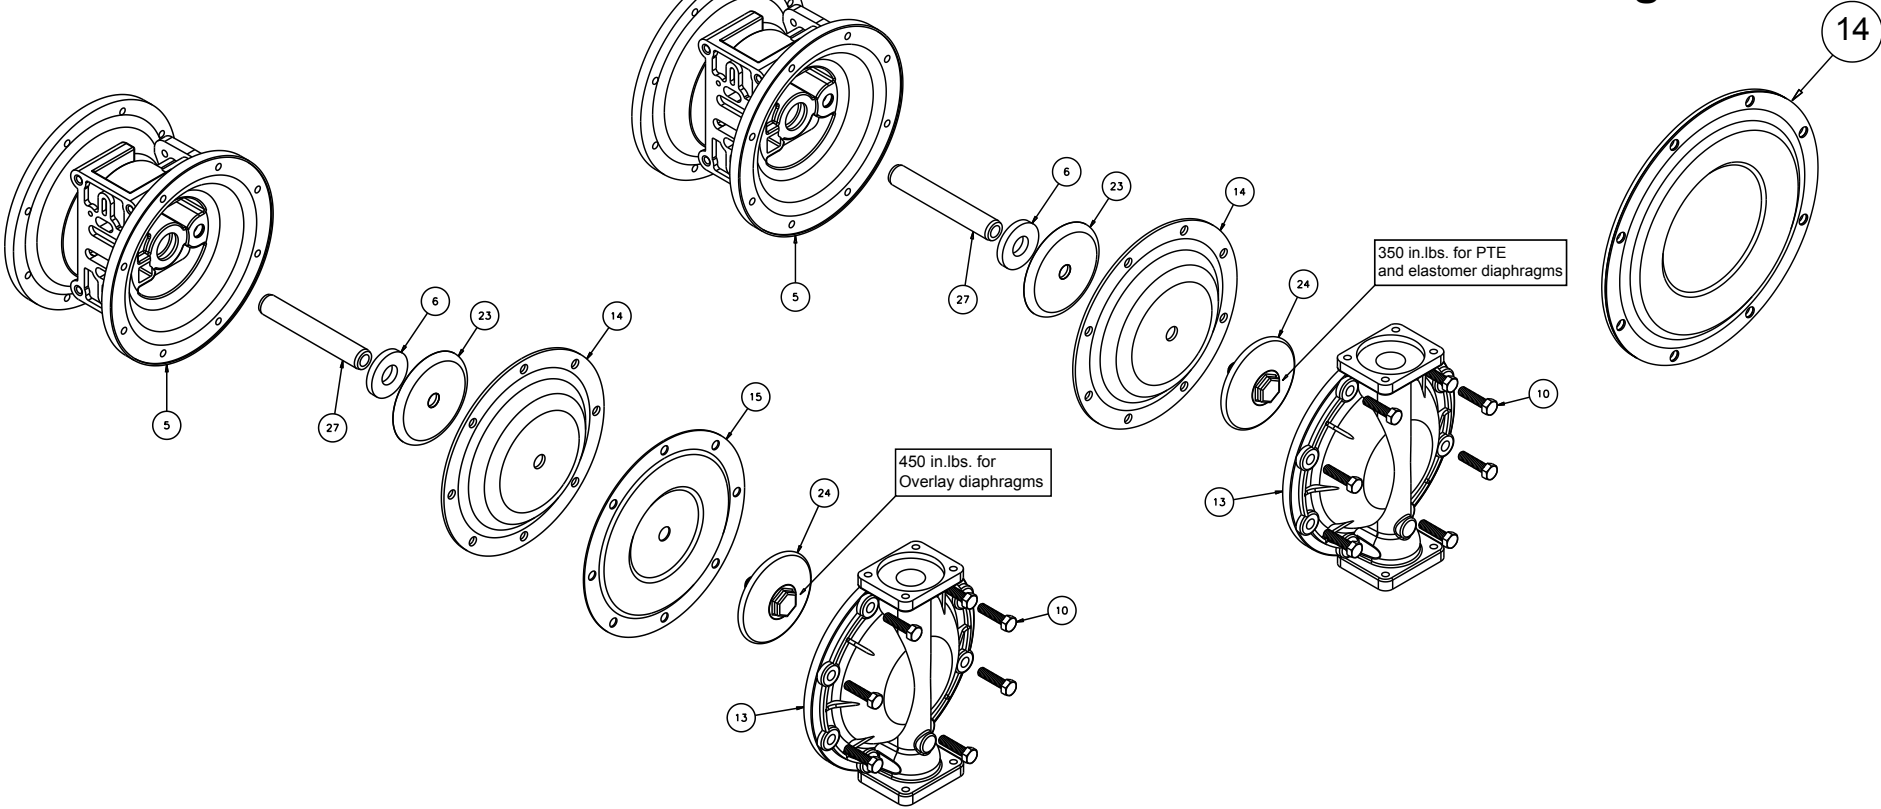

*AVAILABLE FOR FIELD CONVERSION FROM OVERLAY
TO ONE-PIECE BONDED DIAPHRAGM KITS:

| | | |
|------|-------------|---------------------|
| Kit: | 475-250-000 | |
| 2 | 286-112-000 | One-Piece Diaphragm |
| 2 | 612-218-330 | Inner Plates |

DIAPHRAGM SERVICING

To service the diaphragms first shut off the suction, then shut off the discharge lines to the pump. Shut off the compressed air supply, bleed the pressure from the pump and disconnect the air supply line from the pump. Drain any remaining liquid from the pump.

Step #1: See the pump assembly drawing and the diaphragm servicing illustration.

Using a 1/2" wrench or socket, remove the 16 capscrews (item 9) that fasten the manifolds (items 19 & 20) to the outer chambers (item 13).

Step #2: Removing outer chambers.

Using a 1/2" wrench or socket, remove the 16 capscrews (item 10), that fasten the outer chambers (item 13), diaphragms (item 14) and intermediate (item 5) together.

Step #3: Removing the diaphragms and diaphragm plates.

Use a 7/8" wrench or six point socket to remove the outer diaphragm plate assemblies (item 24), diaphragms (item 14) and inner diaphragm plates (item 23) from the diaphragm rod (item 27) by turning counterclockwise. Inspect the diaphragm for cuts, punctures, abrasive wear or chemical attack. Replace the diaphragms if necessary. **DO NOT USE A WRENCH ON THE DIAPHRAGM ROD. FLAWS ON THE SURFACE MAY DAMAGE BEARINGS AND SEALS.**

Step #4: Assembling the diaphragm and diaphragm plates to the diaphragm rod.

Push the threaded stud of one outer diaphragm plate assembly through the center of one diaphragm and through one inner diaphragm plate. Install the diaphragm with the natural bulge facing away from the diaphragm rod and make sure the radius on the inner diaphragm plate is towards the diaphragm, as indicated on the diaphragm servicing illustration. Thread the assembly onto the diaphragm rod, leaving loose.

Step #5: Installing the diaphragm and rod assembly to the pump.

Make sure the bumper (item 6) is installed over the diaphragm rod. Insert rod into pump.

On the opposite side of the pump, pull the diaphragm rod out as far as possible. Make sure the second bumper is installed over the diaphragm rod.

Push the threaded stud of the other outer diaphragm plate assembly through the center of the other diaphragm and through the other inner diaphragm plate. Make sure the radius on the inner diaphragm plate is towards the diaphragm. Thread the assembly onto the diaphragm rod. Use a 7/8" wrench or socket to hold one outer diaphragm plate. Then, use a torque wrench to tighten the other outer diaphragm plate to the diaphragm rod to 500 in. lbs. (56.5 Newton meters).

Align one diaphragm with the intermediate and install the outer chamber to the pump using the 8 capscrews. Tighten the opposite diaphragm plate until the holes in the diaphragm align with the holes in the intermediate. Then, install the other outer chamber using the 8 capscrews.

Step #6: Reinstall the manifolds to the pump using the 16 capscrews.

The pump is now ready to be reinstalled, connected and returned to operation.


OVERLAY DIAPHRAGM SERVICING

The overlay diaphragm (item 15) is designed to fit over the exterior of the standard diaphragm (item 14).

Follow the same procedures described for the standard diaphragm for removal and installation, except tighten the outer diaphragm plate assembly, diaphragms and inner diaphragm plate to the diaphragm rod to 500 in. lbs. (56.5 Newton meters).

One-Piece Bonded DIAPHRAGM SERVICING (Bonded PTFE with integral plate)

The one-piece bonded diaphragm (item 14) has a threaded stud installed in the integral plate at the factory. The inner diaphragm plate has a through hole instead of a threaded hole.

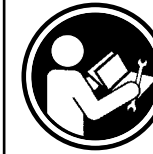

! IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

Place the inner plate over the diaphragm stud and thread the first diaphragm / inner plate onto the diaphragm rod only until the inner plate contacts the rod. Do not tighten. A small amount of grease may be applied between the inner plate and the diaphragm to facilitate assembly.

Insert the diaphragm / rod assembly into the pump and install the outer chamber. Turn the pump over and thread the second diaphragm / inner plate onto the diaphragm rod. Turn the diaphragm until the inner plate contacts the rod and hand tighten the assembly. Continue tightening until the bolt holes align with the inner chamber holes. **DO NOT LEAVE THE ASSEMBLY LOOSE.**

Pilot Valve Servicing, Assembly Drawing & Parts List


PILOT VALVE ASSEMBLY PARTS LIST

| ITEM | PART NUMBER | DESCRIPTION | QTY |
|------|-------------|-----------------------|-----|
| 4 | 095-110-000 | Pilot Valve Assembly | 1 |
| 4-A | 095-095-157 | Valve Body | 1 |
| 4-B | 755-052-000 | Sleeve (With O-rings) | 1 |
| 4-C | 560-033-360 | O-ring (Sleeve) | 6 |
| 4-D | 775-055-000 | Spool (With O-rings) | 1 |
| 4-E | 560-023-360 | O-ring (Spool) | 3 |
| 4-F | 675-037-080 | Retaining Ring | 1 |

FOR PUMPS WITH CAST IRON CENTER SECTION

| ITEM | PART NUMBER | DESCRIPTION | QTY |
|------|-------------|----------------------|-----|
| 4 | 095-110-558 | Pilot Valve Assembly | 1 |
| 4-A | 095-095-558 | Valve Body | 1 |

(includes all other items used on 095-110-000)

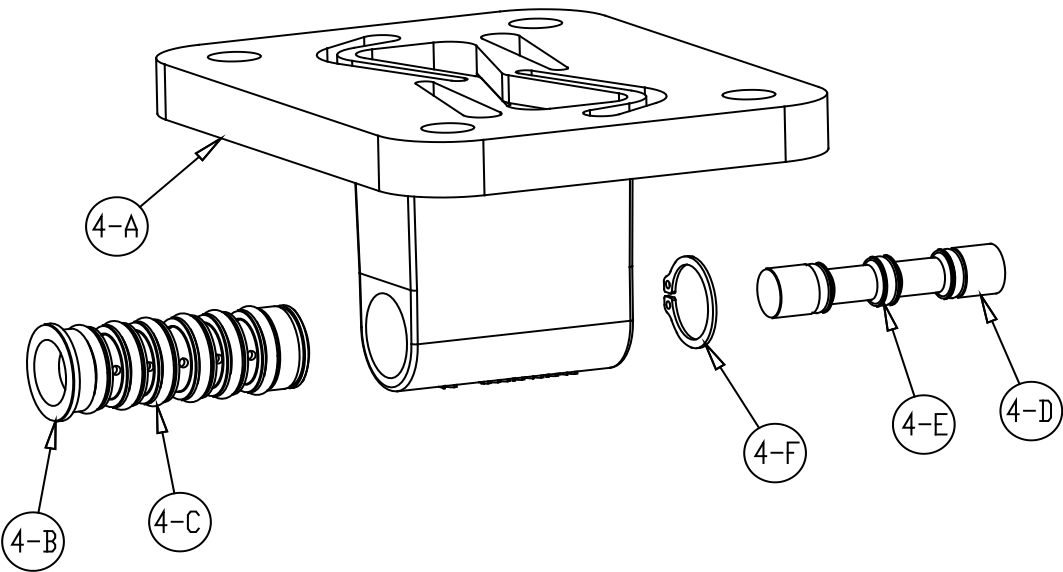

PILOT VALVE SERVICING

To service the pilot valve first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump.

STEP #1: See pump assembly drawing.

Using a 1/2" wrench or socket, remove the four capscrews (item 11). Remove the air inlet cap (item 8) and air inlet gasket (item 18). The pilot valve assembly (item 4) can now be removed for inspection and service.

STEP #2: Disassembly of the pilot valve.

Remove the pilot valve spool (item 4-D). Wipe clean and inspect spool and o-rings for dirt, cuts or wear. Replace the o-rings and spool if necessary.

Remove the retaining ring (item 4-F) from the end of the sleeve (item 4-B) and remove the sleeve from the valve body (item 4-A). Wipe clean and inspect sleeve and o-rings for dirt, cuts or wear. Replace the o-rings and sleeve if necessary.

STEP #3: Re-assembly of the pilot valve.

Generously lubricate outside diameter of the sleeve and o-rings. Then carefully insert sleeve into valve body. Take CAUTION when inserting sleeve, not to shear any o-rings. Install retaining ring to sleeve. Generously lubricate outside diameter of spool and o-rings. Then carefully insert spool into sleeve. Take CAUTION when inserting spool, not to shear any o-rings. Use BP-LS-EP-2 multipurpose grease, or equivalent.

STEP #4: Re-install the pilot valve assembly into the intermediate.

Be careful to align the ends of the pilot valve stem between the plunger pins when inserting the pilot valve into the cavity of the intermediate.

Re-install the gasket, air inlet cap and capscrews. Connect the air supply to the pump. The pump is now ready for operation.

ACTUATOR PLUNGER SERVICING

To service the actuator plunger first shut off the compressed air supply, bleed the pressure from the pump, and disconnect the air supply line from the pump.

Step #1: See PUMP ASSEMBLY DRAWING.

Using a 1/2" wrench or socket, remove the four capscrews (items 11). Remove the air inlet cap (item 8) and air inlet gasket (item 18). The pilot valve assembly (item 4) can now be removed.

Step #2: Inspect the actuator plungers.

See ILLUSTRATION AT RIGHT.

The actuator plungers (items 25) can be reached through the pilot valve cavity in the intermediate assembly (item 5).

Remove the plungers (item 25) from the bushings (item 7) in each end of the cavity. Inspect the installed o-ring (items 21) for cuts and/or wear. Replace the o-rings if necessary. Apply a light coating of grease to each o-ring and re-install the plungers in to the bushings. Push the plungers in as far as they will go.

To remove the bushings (item 7), first remove the retaining rings (item 26) by using a flat screwdriver.

NOTE: It is recommended that new retaining rings be installed.


Step #3: Re-install the pilot valve assembly into the intermediate assembly.

Be careful to align the ends of the stem between the plungers when inserting the stem of the pilot valve into the cavity of the intermediate.

Re-install the gasket (item 18), air inlet cap (item 8) and capscrews (item 11).

Connect the air supply to the pump. The pump is now ready for operation.

ACTUATOR PLUNGER SERVICING

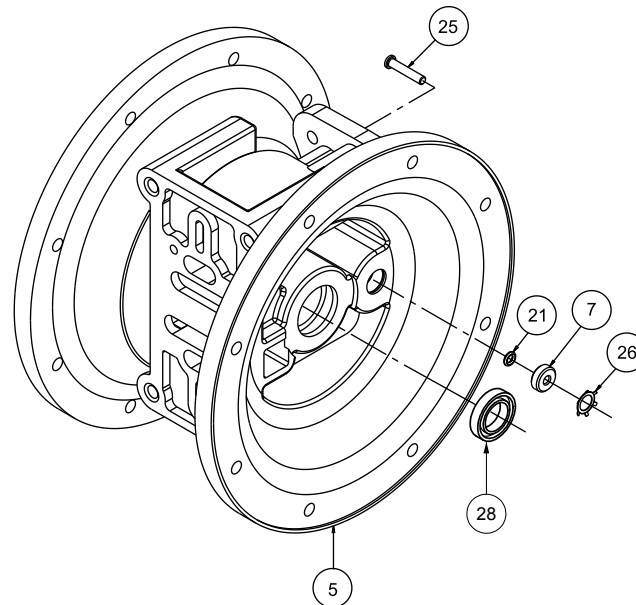

! IMPORTANT

Read these instructions completely, before installation and start-up. It is the responsibility of the purchaser to retain this manual for reference. Failure to comply with the recommendations stated in this manual will damage the pump, and void factory warranty.

CHECK VALVE SERVICING

Before servicing the check valve components, first shut off the suction line and then the discharge line to the pump. Next, shut off the compressed air supply, bleed air pressure from the pump, and disconnect the air supply line from the pump. Drain any remaining fluid from the pump. The pump can now be removed for service.

To access the check valve components, remove the manifold (item 20 or item 19 not shown). Use a $\frac{1}{2}$ " wrench or socket to remove the fasteners. Once the manifold is removed, the check valve components can be seen.

Inspect the check balls (items 2) for wear, abrasion, or cuts on the spherical surface. The check valve seats (item 29) should be inspected for cuts, abrasive wear, or embedded material on the surfaces of both the external and internal chambers. The spherical surface of the check balls must seat flush to the surface of the check valve seats for the pump to operate to peak efficiency. Replace any worn or damaged parts as necessary.


Re-assemble the check valve components. The seat should fit into the counter bore of the outer chamber.

The pump can now be reassembled, reconnected and returned to operation.


METALLIC SEATS

Two o-rings (item 22) are required for metallic seats.

Check Valve Drawing

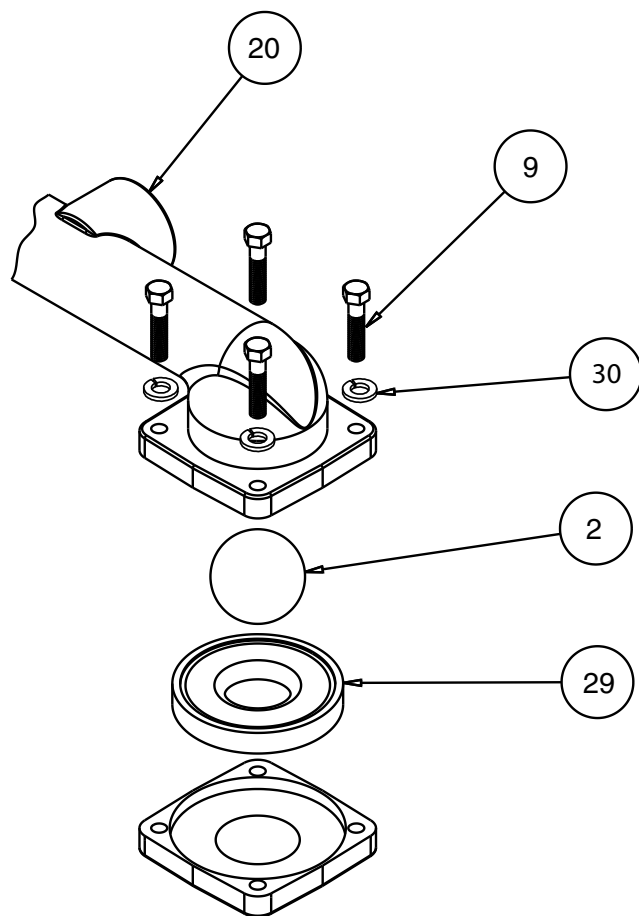

with Non-Metallic
Seats

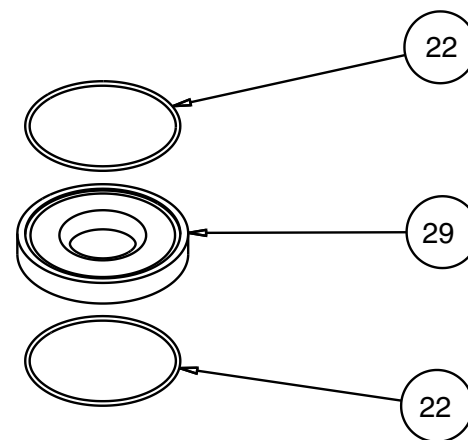

with Metallic Seats

Optional Muffler Configurations, Drawing

OPTION 0

530-028-550 Encapsulated Muffler uses (1) *
Cap and (4) 710-015-115 Self Tapping Screw
to hold it in place.




OPTION 1

530-027-000 Sound Dampening Muffler
screws directly into the Air Valve body.
This muffler is equipped with a porous
plastic element.

OPTION 2

530-010-000 Mesh Muffler screws
directly into the Air Valve Body. This
muffler is equipped with a metal element.

* Note: Cannot be used with Air Valve
Assembly 031-179-000 used with
cast iron centers.

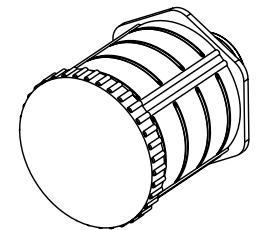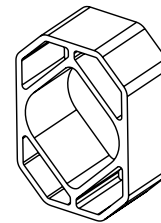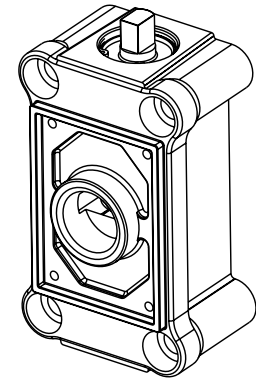


OPTION 6


530-033-000 Metal Muffler screws
directly into the Air Body.



ATEX Compliant

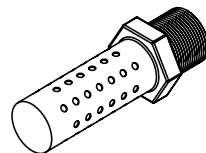

Option 6

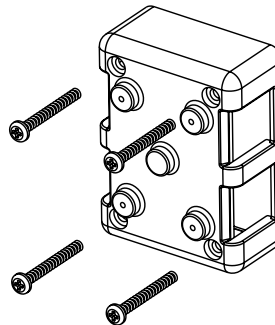

Option 0

Option 1 and 2

PUMPING HAZARDOUS LIQUIDS

When a diaphragm fails, the pumped liquid or fumes enter the air end of the pump. Fumes are exhausted into the surrounding environment. When pumping hazardous or toxic materials, the exhaust air must be piped to an appropriate area for safe disposal. See illustration #1 at right.

This pump can be submerged if the pump materials of construction are compatible with the liquid being pumped. The air exhaust must be piped above the liquid level. See illustration #2 at right. Piping used for the air exhaust must not be smaller than 1" (2.54 cm) diameter. Reducing the pipe size will restrict air flow and reduce pump performance. When the pumped product source is at a higher level than the pump (flooded suction condition), pipe the exhaust higher than the product source to prevent siphoning spills. See illustration #3 at right.

CONVERTING THE PUMP FOR PIPING THE EXHAUST AIR


The following steps are necessary to convert the pump to pipe the exhaust air away from the pump.

Remove the muffler (item 31). The air distribution valve (item 1) has 1" NPT threads for piped exhaust.

IMPORTANT INSTALLATION


NOTE: The manufacturer recommends installing a flexible conductive hose or connection between the pump and any rigid plumbing. This reduces stresses on the molded threads of the air exhaust port. Failure to do so may result in damage to the air distribution valve body.

Any piping or hose connected to the pump's air exhaust port must be conductive and physically supported. Failure to support these connections could also result in damage to the air distribution valve body.

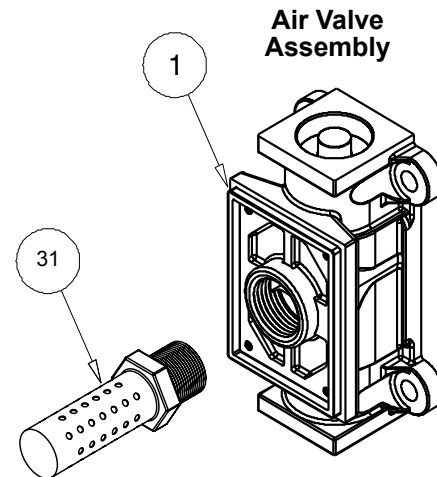

On ATEX compliant units the pump comes equipped with a standard metal muffler

CONVERTED EXHAUST ILLUSTRATION

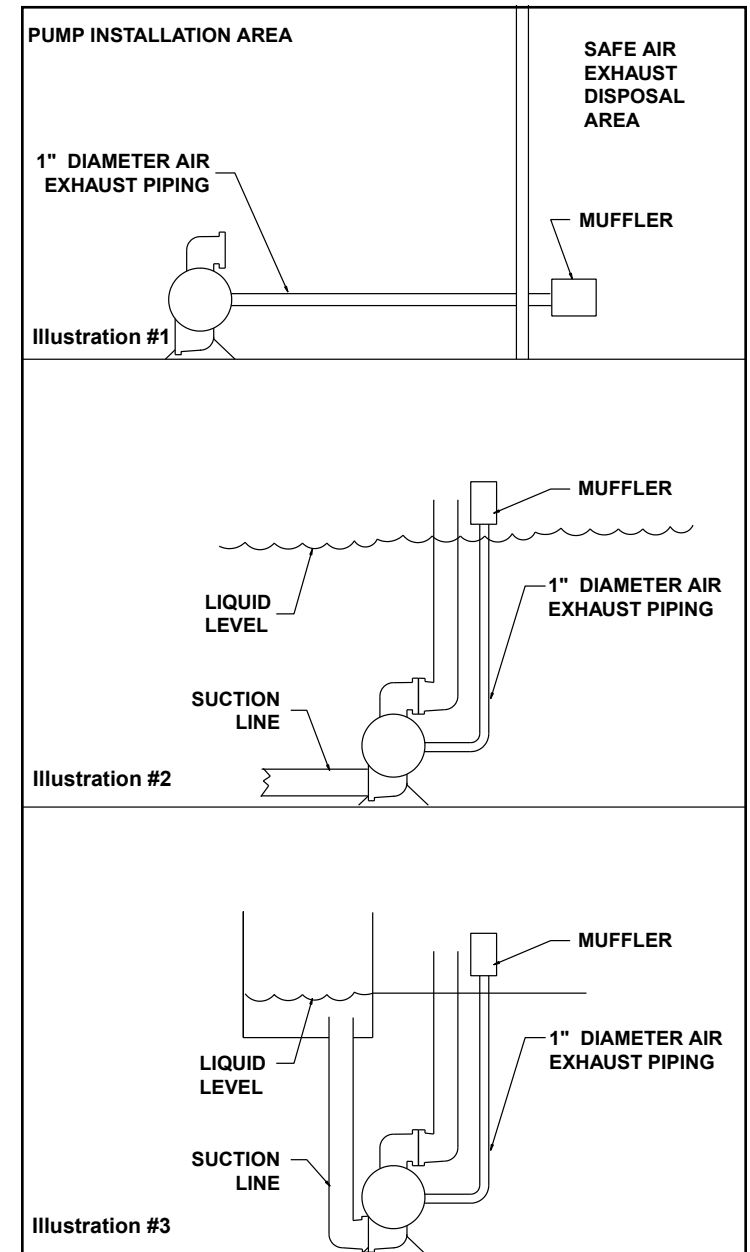

Pulse Output Kit Drawing

PULSE OUTPUT KIT OPTION


This pump can be fitted with a Pulse Output Kit. This converts the mechanical strokes of the pump to an electrical signal which interfaces with the RuppTech® Stroke Counter/ Batch Controller or user control devices such as a PLC.

The Pulse Output Kits mount directly onto the Muffler Cap on the Air Distribution Valve Assembly or onto the air valve and senses each stroke of the main spool.

Consult the factory for further information and availability.


Pulse Output Kits

| | |
|-------------|------------------------------|
| 475-244-001 | 10-30 VDC |
| 475-244-002 | 110/220 VAC |
| 475-244-003 | 10-30VDC, 110VAC and 220 VAC |

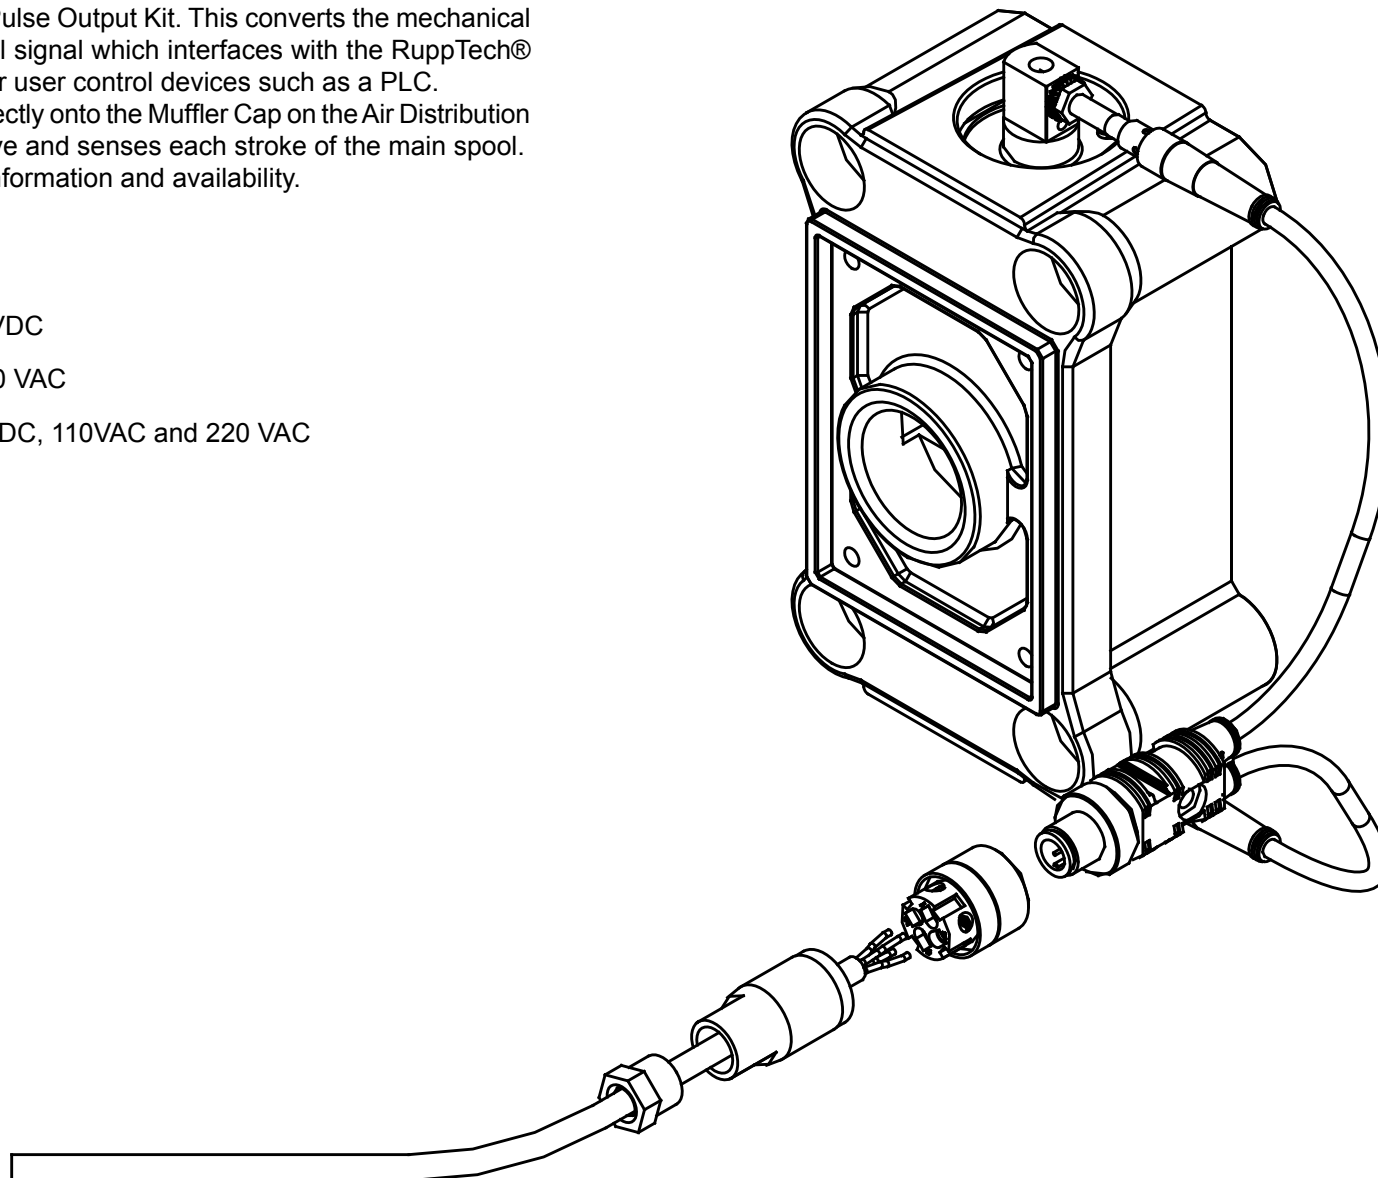


Grounding The Pump

To be fully groundable, the pumps must be ATEX Compliant. Refer to pump data sheet for ordering.

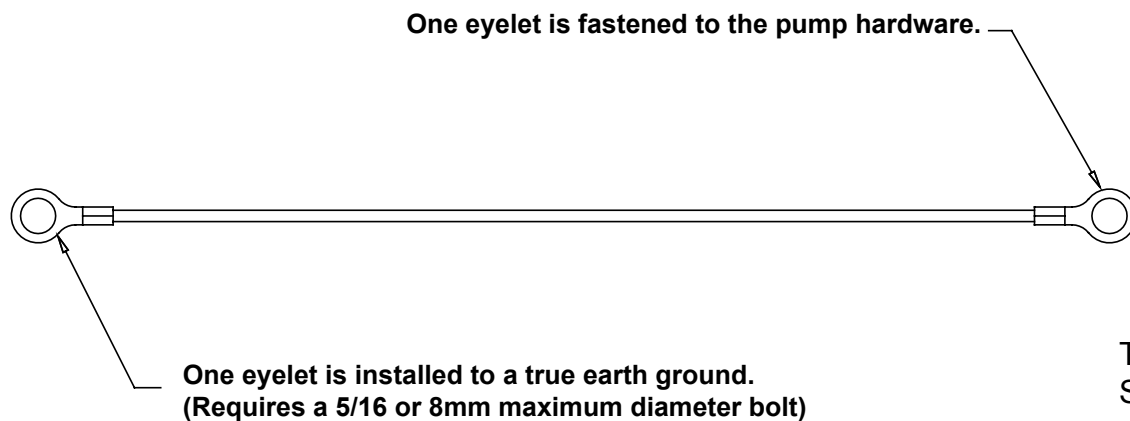

This 8 foot long (244 centimeters) Ground Strap part number 920-025-000, can be ordered as a service item.

To reduce the risk of static electrical sparking, this pump must be grounded. Check the local electrical code for detailed grounding instruction and the type of equipment required.

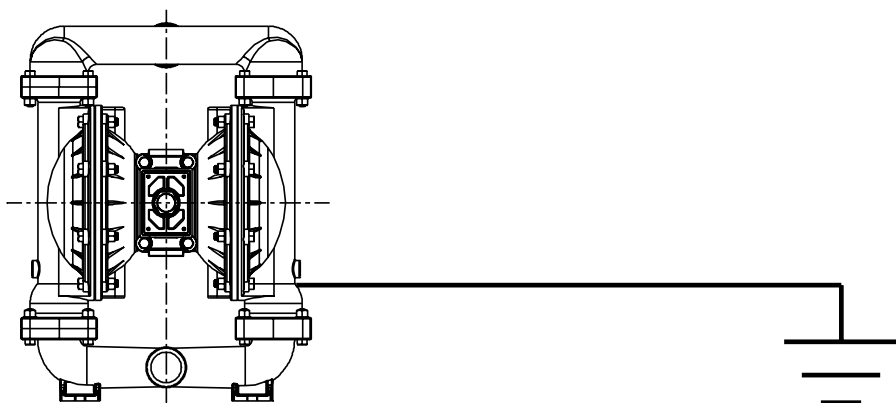

| | |
|--|---|
| | <p>! WARNING</p> <p><i>Take action to prevent static sparking. Fire or explosion can result, especially when handling flammable liquids. The pump, piping, valves, containers or other miscellaneous equipment must be grounded.</i></p> |
|--|---|

Declaration of Conformity

Declaration of Conformity



Declaration of Conformity

**Manufacturer: Warren Rupp, Inc.®, 800 N. Main Street, P.O. Box 1568,
Mansfield, Ohio, 44901-1568 USA**

certifies that Air-Operated Double Diaphragm Pump Series:
M Non-Metallic, M Metallic, and Surge Suppressors comply
with the European Community Directive 2006/42/EC on Machinery,
according to Annex VIII. This product has used Harmonized Standard
EN809:1998+A1:2009, Pumps and Pump Units for Liquids - Common Safety
Requirements, to verify conformance.

David Roseberry
Signature of authorized person

David Roseberry
Printed name of authorized person

Revision Level: F

October 20, 2005
Date of issue

Engineering Manager
Title

August 23, 2012
Date of revision





EC Declaration of Conformity

In accordance with ATEX Directive 94/9/EC,
Equipment intended for use in potentially explosive environments.

Manufacturer: Warren Rupp, Inc.®, A Unit of IDEX Corporation
800 North Main Street, P.O. Box 1568, Mansfield, OH 44901-1568 USA

EN 60079-25: 2011

For pumps equipped with Pulse Output ATEX Option
Quality B.V. (0344)

AODD Pumps and Surge Suppressors

For Type Examination Designations, see page 2 (back)

AODD (Air-Operated Double Diaphragm) Pumps

EC Type Examination Certificate No. Pumps: KEMA 09ATEX0071 X

DEKRA Certification B.V. (0344)

Meander 1051

6825 MJ Arnhem

The Netherlands

Applicable Standard:

EN13463-1: 2009,

EN13463-5: 2011




DATE/APPROVAL/TITLE:
14 MAY 2014

David Roseberry
David Roseberry, Engineering Manager



EC Declaration of Conformity

ATEX Summary of Markings

| Type | Marking | | Listed In | Non-Conductive Fluids | |
|---|---|--|---|---|-------------------------------|
| Pump types, M05, M1F, M15, M20 and M30 provided with the pulse output option |  | II 2 G Ex ia c IIC T5 II 3/2 G Ex ia c IIC T5 II 2 D Ex c iaD 20 IP67 T100°C | KEMA 09ATEX0071 X CE 0344 | KEMA 09ATEX0071 X KEMA 09ATEX0071 X KEMA 09ATEX0071 X | No Yes Yes |
| Pump types, M05, M1F, M15 M20 and M30 provided with the integral solenoid option | | II 2 G EEx m c II T5 II 3/2 G EEx m c II T5 II 2 D c IP65 T100°C | KEMA 09ATEX0071 X CE 0344 | KEMA 09ATEX0071 X KEMA 09ATEX0071 X KEMA 09ATEX0071 X | No Yes Yes |
| Pump types, MPB1/4, M05, M1F, M15, M20, M30, MSB1, MHDF1, MHDF2 without the above listed options, no aluminum parts | | II 1 G c T5 II 3/1 G c T5 II 1 D c T100°C I M1 c I M2 c | KEMA 09ATEX0071 X KEMA 09ATEX0072 X CE 0344 | KEMA 09ATEX0071 X KEMA 09ATEX0071 X KEMA 09ATEX0071 X KEMA 09ATEX0071 X KEMA 09ATEX0072 X | No Yes Yes No Yes |
| Pump types, MPB1/4, M05, M1F, M15, M20, M30, MSB1, MHDF1, MHDF2, MHDF3 | | II 2 G c T5 II 3/2 G c T5 II 2 D c T100°C | KEMA 09ATEX0072 X CE | KEMA 09ATEX0072 X KEMA 09ATEX0072 X KEMA 09ATEX0072 X | No Yes Yes |
| MT Series Surge Suppressors | | II 2 G T5 II 3/2 G T5 II 2 D T100°C | KEMA 09ATEX0073 CE | KEMA 09ATEX0073 KEMA 09ATEX0073 KEMA 09ATEX0073 | No Yes Yes |

EC Type Certificate No. Pumps: KEMA 09ATEX0071 X
 Type Certificate No. Pumps: KEMA 09ATEX0072 X
 Type Certificate No. Suppressors: KEMA 09ATEX0073

